
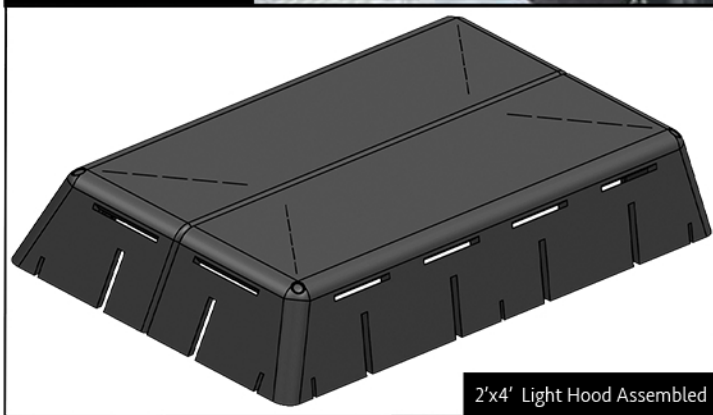


PrivacyShield[®] Light Hood

The following installation instructions are given as a general guide to avoid common errors. Installer should follow best practices for construction and workmanship. Acoustical Solutions bears no responsibility for installation or contractor selection. Please contact a sales representative if you have questions, concerns or specific project requirements.

Be sure to inspect materials upon delivery. Please note any damage on the delivery ticket and notify Acoustical Solutions immediately. Materials should be stored in original packing in a clean, climate controlled environment free of moisture. Installation should not commence until building is enclosed and under standard occupancy conditions and surfaces are of acceptable condition and properly prepared. Do not install materials of unacceptable quality.

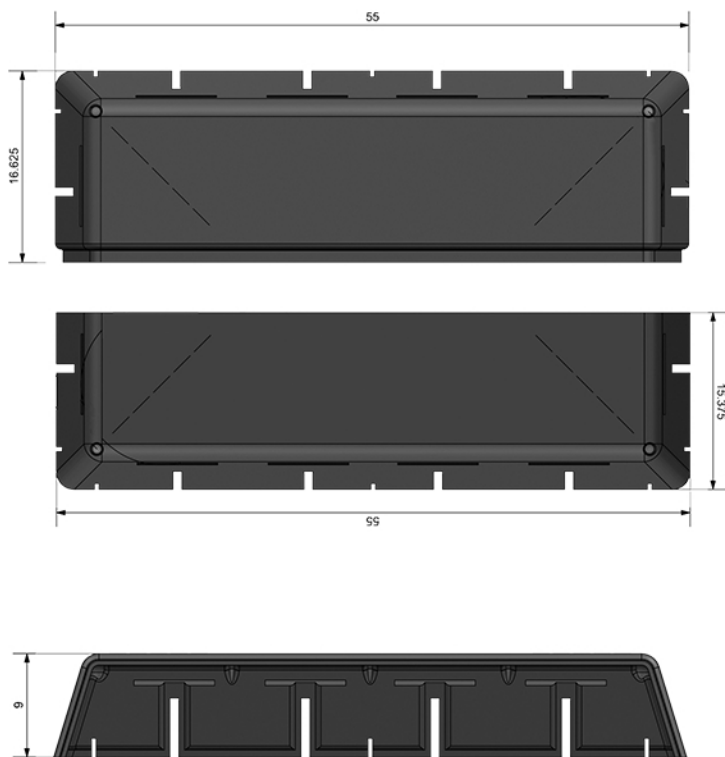


- Take the wide half (Part A) into the ceiling plenum, locate ceiling support wire and cut slit for ceiling wire to pass, place Hood over light (corner slots align with ceiling grid)
- Apply bonding Paste with a brush along the ship lap joint.
- Take the second half of the Hood and make slit cuts along impression guide lines when possible, place Hood so the ship lap joint is aligned. Now apply the tape across ship lap joint to ensure proper alignment while bonding paste sets up to maintain the acoustical integrity of the Hood.
- Repeat process for next Light Hood.


Note: 2'x2' Light hoods are split in half. Apply bonding paste and join as appropriate to procedure above.




PrivacyShield[®] Light Hood

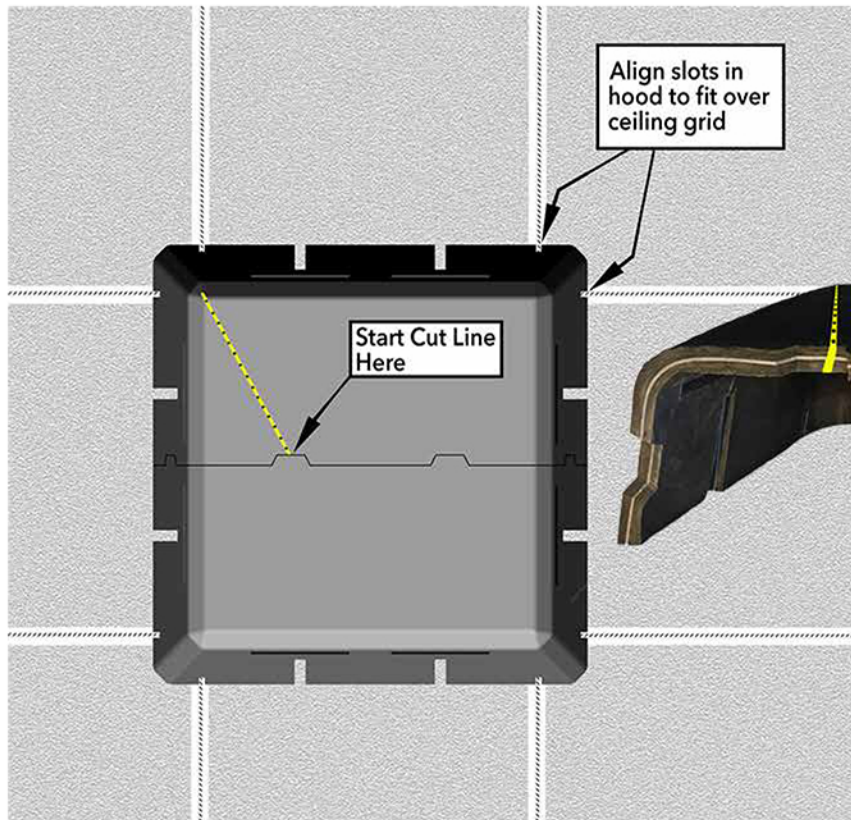

Light hoods may need to be modified to work around ceiling tile wires, electrical cables or other obstructions. The standard hoods may be cut using a standard long blade utility knife.

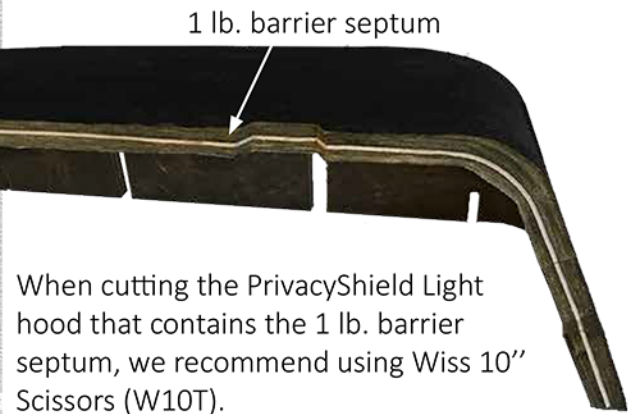

Note: Actual Cut lines will be chosen by the installer as required.

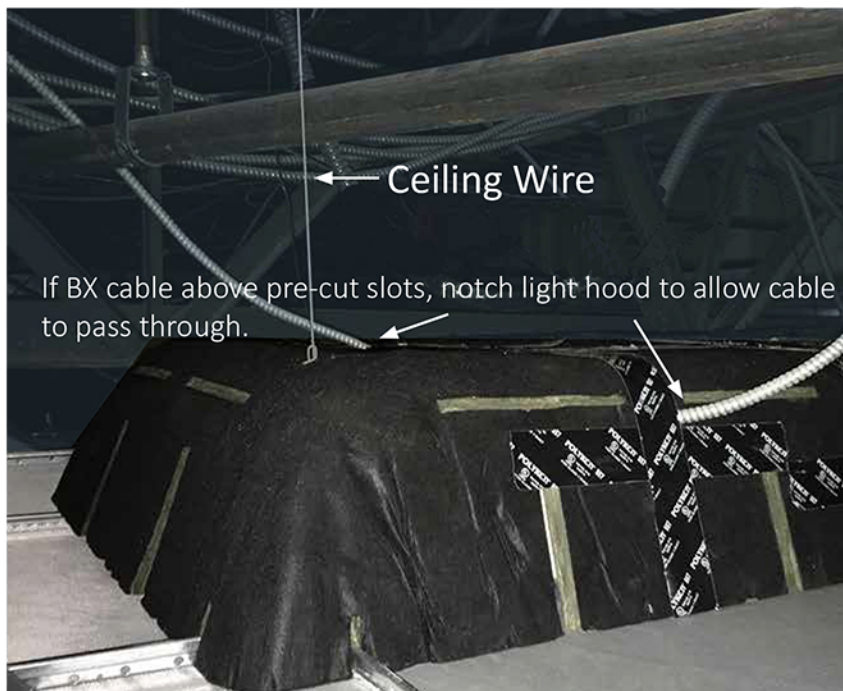

PrivacyShield[®] Light Hood

When two units will meet at an adjacent corner, the edges may be cut in the following manner.

