


## Fabric Wrapped Panel Installation: Z-Clips Wall Mount

The following installation instructions are given as a general guide to avoid common errors. Installer should follow best practices for construction and workmanship. Acoustical Solutions bears no responsibility for installation or contractor selection. Please contact a sales representative if you have questions, concerns or specific project requirements.


Be sure to inspect materials upon delivery. Please note any damage on the delivery ticket and notify Acoustical Solutions immediately. Materials should be stored in original packing in a clean, climate controlled environment free of moisture. Installation should not commence until building is enclosed and under standard occupancy conditions and surfaces are of acceptable condition and properly prepared. Do not install materials of unacceptable quality.

### INSTALLATION METHOD

Z-clips are a two part mechanical fastener used to mount acoustical panels to a wall. Z-clips will be factory mounted to the back of the panel. Mating wall z-clips are supplied with the order. Determine the location and layout of where the panel(s) will be mounted to the wall. Mirror mounting locations from panel onto the wall to line up with the z-clips on the back of the panels. Create reference lines on the wall to ensure panels will mount plumb and level. Secure z-clips to the wall using appropriate fasteners. Slide panel z-clips onto wall z-clips. Repeat process for multiple panels.

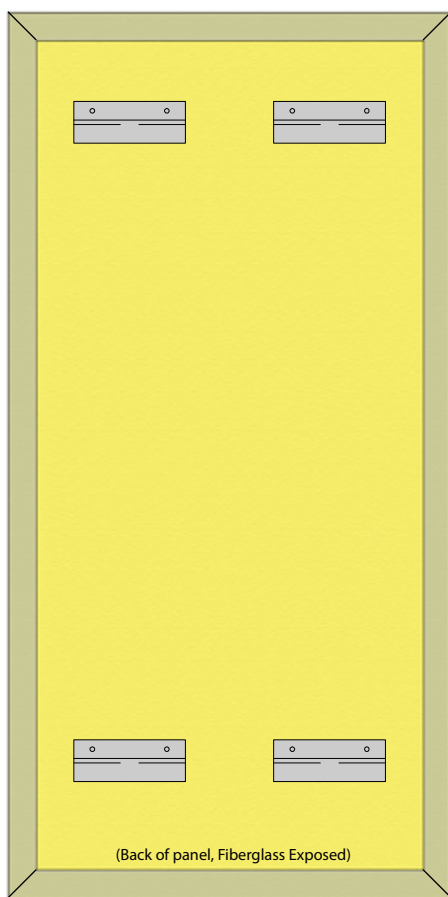


(Typical)

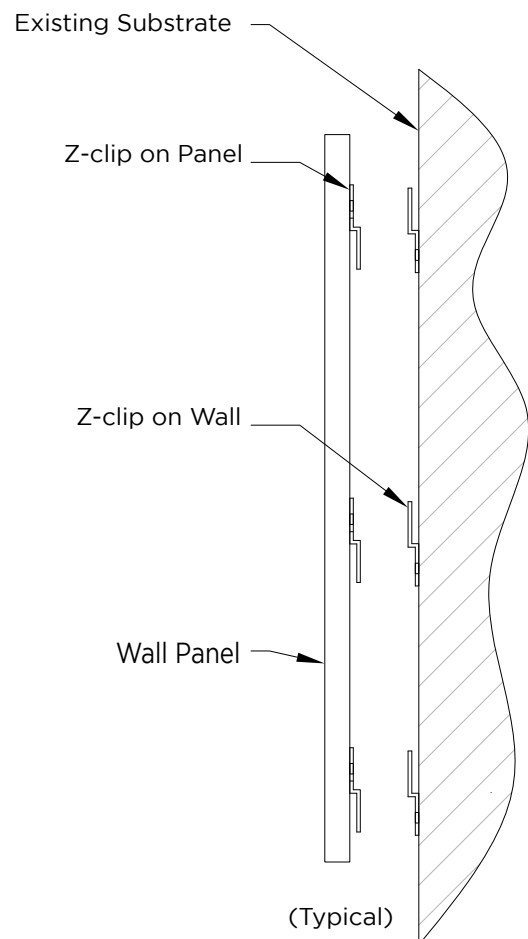


## Fabric Wrapped Panel Installation: Z-Clips Wall Mount


1) Layout panel location(s) on the wall

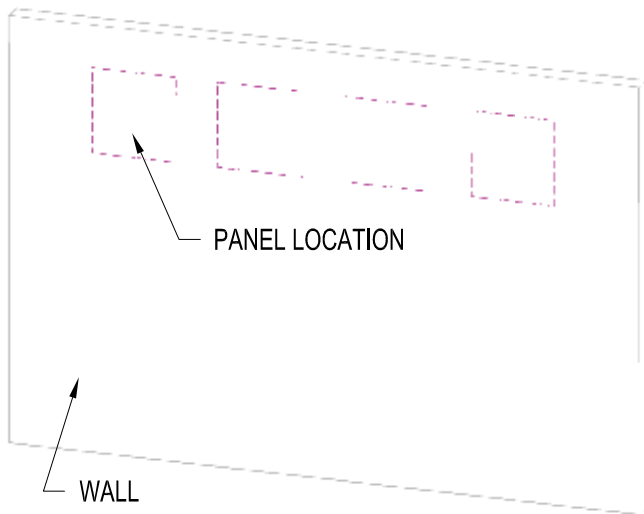

2) Determin Z-clip locations on wall, brackets should line up with z-clips factory installed on panel back.

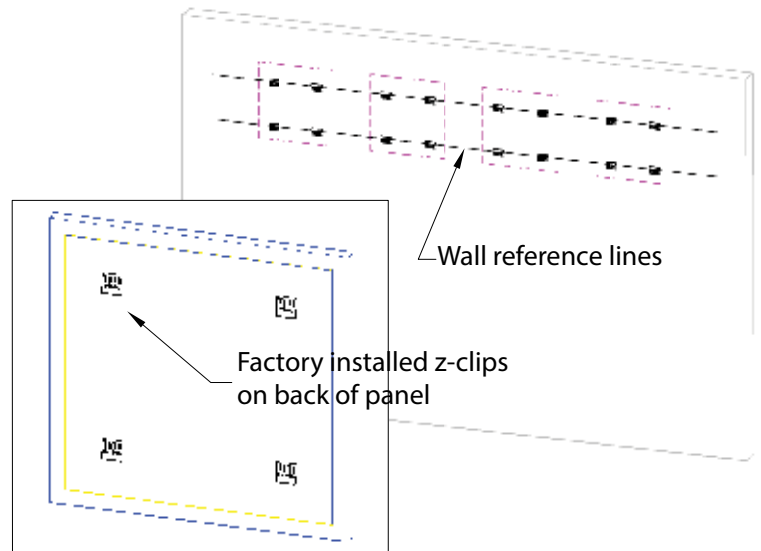

3) Secure z-clip wall plate to wall with appropriate fasteners

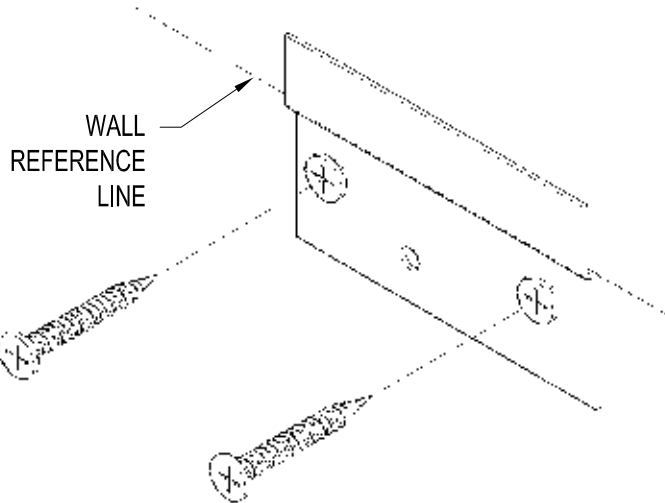

4) Slide the Z-clips attached to the panel onto the z-clips attached to the wall.

