




Fabric Wrapped Panel Installation: Impaling Clips

The following installation instructions are given as a general guide to avoid common errors. Installer should follow best practices for construction and workmanship. Acoustical Solutions bears no responsibility for installation or contractor selection. Please contact a sales representative if you have questions, concerns or specific project requirements.

Be sure to inspect materials upon delivery. Please note any damage on the delivery ticket and notify Acoustical Solutions immediately. Materials should be stored in original packing in a clean, climate controlled environment free of moisture. Installation should not commence until building is enclosed and under standard occupancy conditions and surfaces are of acceptable condition and properly prepared. Do not install materials of unacceptable quality.

INSTALLATION METHOD

Determine the location of where the panel(s) will be mounted to the wall. Lightly mark outside edge of location for the top, bottom, left and right of the panel. Mount impaling clips to the wall surface using the appropriate fastener or hot melt adhesive. Impaling clips should be set in at least six inches from the outer edge of the panel to avoid the fabric on the back of the panel. Apply generous amount of construction adhesive (not included) to the back of the fabric wrapped panel. Line up the panel to the marks on the wall and firmly push the panel down onto the impaling clips to impale the clips into the fiberglass core. Verify panels are straight and plumb with a level. Impaling clips hold the panel in place while the adhesive sets. Repeat process for multiple panels.

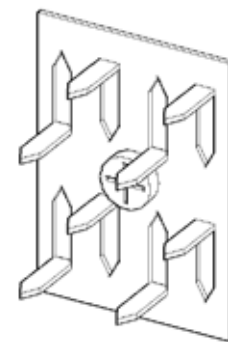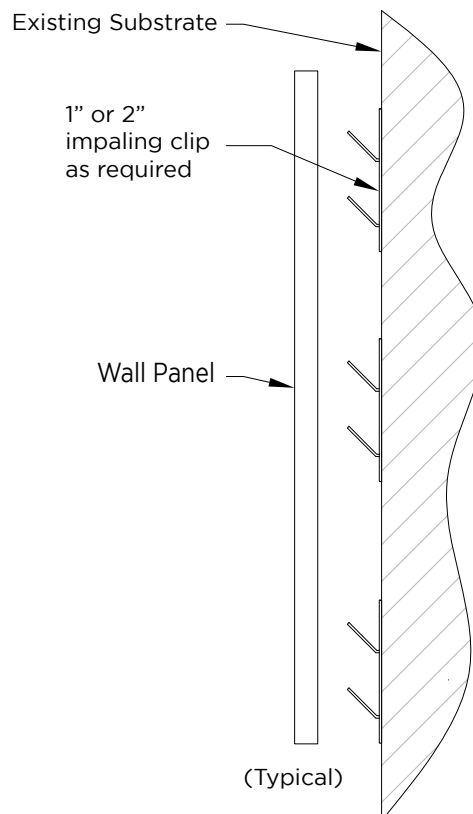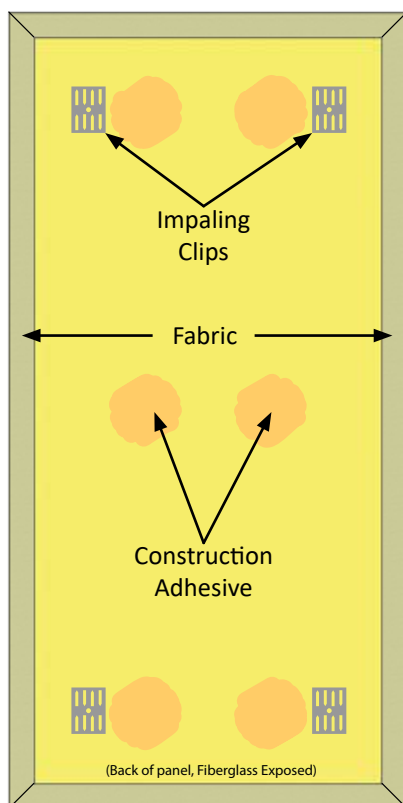

Impaling Clip
(typical)

TYPICAL # OF CLIPS PANEL SIZE # OF CLIPS

1'x2' - 2'x2'	2 clips
2'x4' - 2'x5'	4 clips
2'x6' - 2'x8'	6 clips
2'x10', 4'x8'	8 clips
4'x10'	10 clips