


ClearSonic AmpPac



1. Stand acrylic panels up in a zigzag formation. Peel off paper masking.
Note: this product is NOT returnable once paper masking is removed.

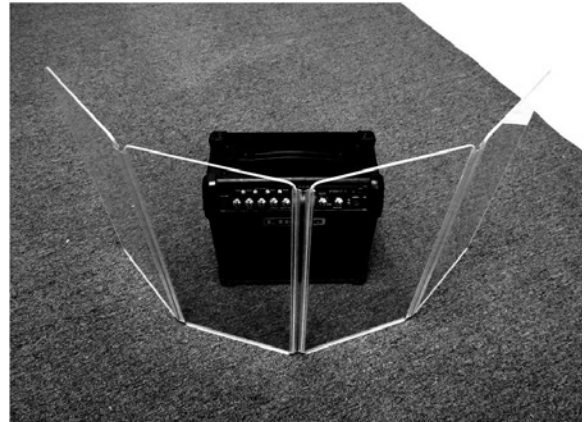

2. Place acrylic panels in semi-circle around your amplifier.



3. Attach S2 SORBER baffles together with included Velcro.




4. Place SORBER baffles behind your amplifier with the edges meeting the acrylic panels and your AmpPac is done!

5. For AmpPacs with lids: Place larger SORBER baffle lid on top so the front rests on the acrylic panels and the back rests on the S2 SORBER baffles. There should be a small gap in the back to allow for air circulation. Your AmpPac is now complete!




ClearSonic AmpPac

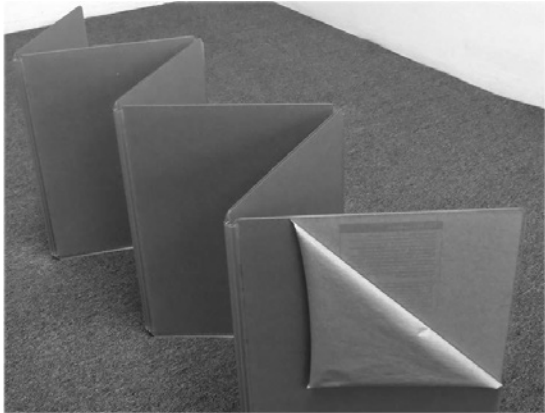

1. Stand acrylic panels up in a zigzag formation. Peel off paper masking. *Note: this product is NOT returnable once the paper masking has been removed.*



2. Set acrylic panels around your amplifier in the shape of a hexagon so that the two edge panels meet each other in the back.

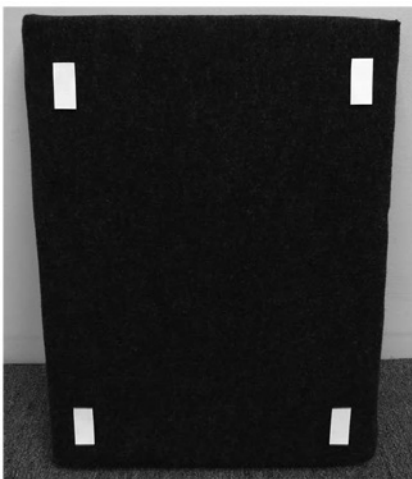

3. Place four (4) pieces of included Velcro on each S1 SORBER baffle about 1 inch from each corner. Once the Velcro is placed, peel the masking off to expose adhesive backing.



4. Place each S1 SORBER baffle in position on the acrylic shield (1 baffle per panel). Apply pressure from both sides to get Velcro to stick. Once all the SORBER baffles are in place your AmpPac is ready to rock!

5. For **AmpPacs** with Lids: Set larger S3 SORBER baffle on top. There should be small gaps in front and back to promote air circulation.

