


AlphaSorb[®] Art Acoustic Panel



AlphaSorb[®] Art Acoustic Panel

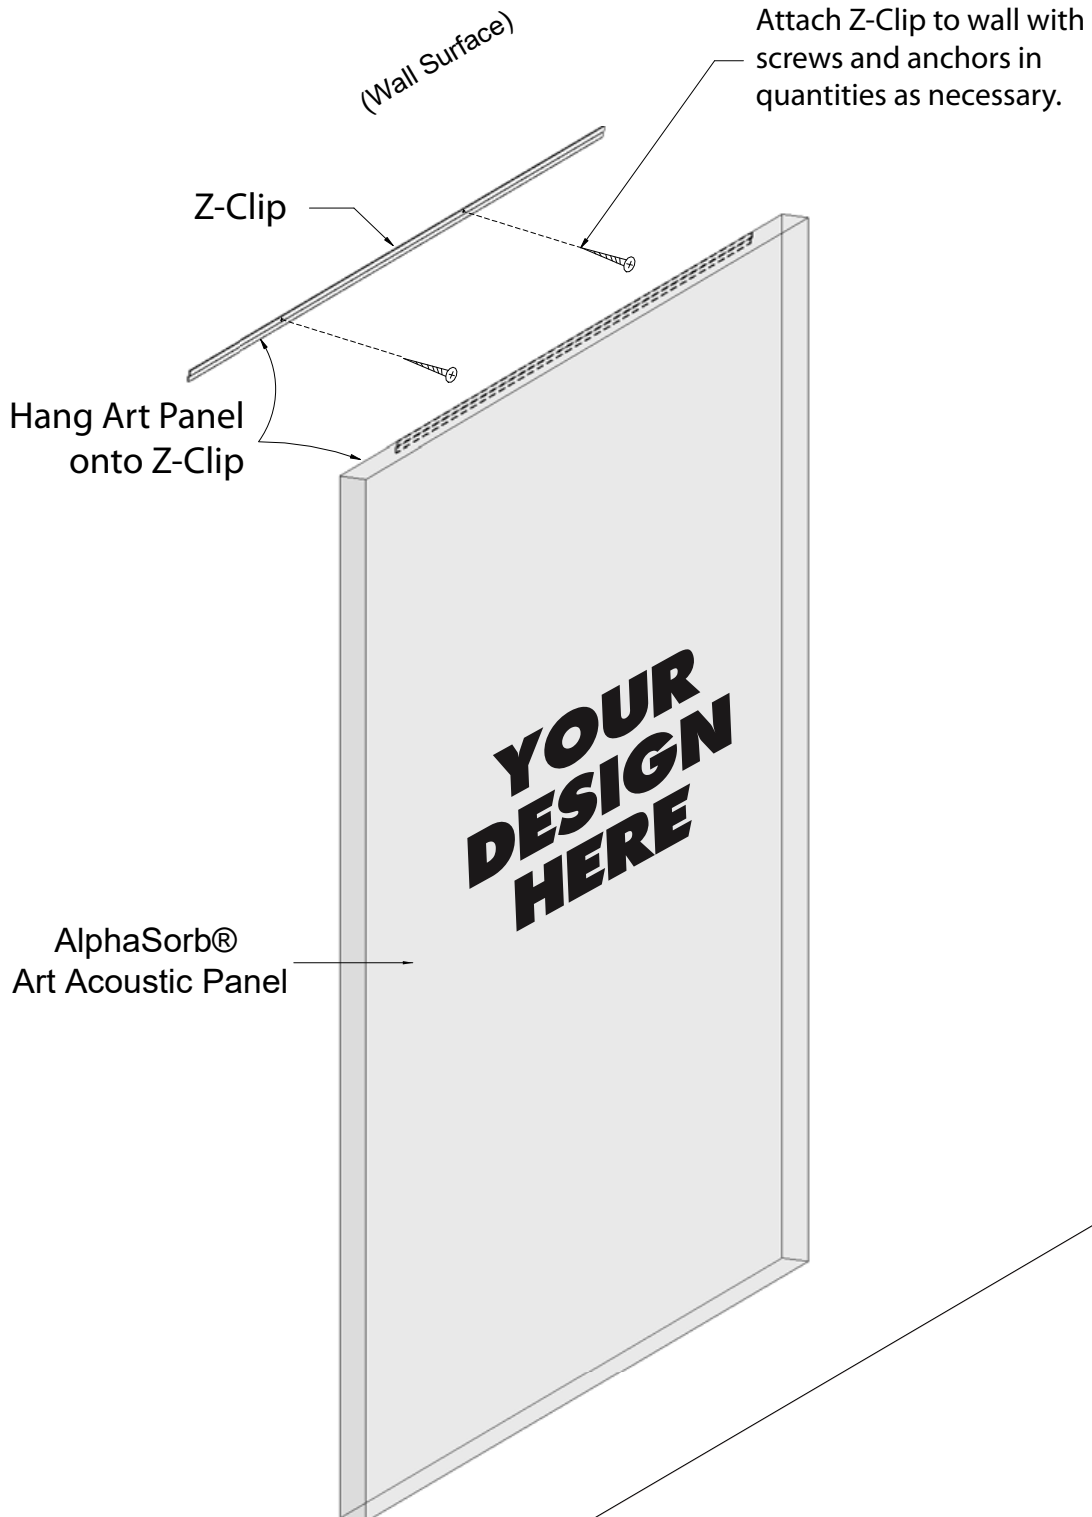

AlphaSorb[®] Art Acoustic Panel

INSTALLATION PROCEDURE

- Handle the panels individually and with clean hands to reduce the possibility of any damage during installation.
- Each panel shipment will include an appropriate sized Z-Clip with pre-drilled holes, drywall anchors and screws.
- The Z-Clip hanging method is similar to hanging a picture on the wall. The clip allows for easy installation onto or off the wall.
- Determine where you wish to have the panel installed. Lightly mark the center point of the top edge.
- Simply line up the center of the Z-Clip 1-1/2" below the center panel mark. When marking the location of the Z-Clip, be sure to use a level.
- Next, mark the location for your screws through the pre-drilled holes or drill more holes as necessary. Be sure to keep Z-Clip level. You may temporarily screw through the center hole for support while marking the screw locations on the wall.
- Install drywall anchors as necessary. Screw Z-Clip to the wall through the pre-drilled holes using provided drywall screws/anchors or other mechanical fasteners as necessary.
- Please note that it is recommended to screw into studs, blocking, or use appropriate anchors as necessary.
- Slide panel down to onto Z-Clip. Ensure Z-Clip engages the panel track prior to releasing the panel.

Please Note: These installation instructions are given as a general guide to avoid common errors. Installer should follow best practices for construction and workmanship. Acoustical Solutions bears no responsibility for installation or contractor selection. Please contact a sales representative if you have questions, concerns or specific project requirements.

Be sure to inspect materials upon delivery. Please note any damage on the delivery ticket and notify Acoustical Solutions immediately. Materials should be stored in original packing in a clean, climate controlled environment free of moisture. Installation should not commence until building is enclosed and under standard occupancy conditions and surfaces are of clean, acceptable condition and properly prepared. Installation is best done at the end of a construction project. Do not install materials of unacceptable quality.

