


PRIVACYSHIELD[®] DUAL-SIDED ABSORPTIVE SOUNDPROOFING BLANKET INSTALL GUIDE

The following installation instructions are given as a general guide to avoid common errors. Installer should follow best practices for construction and workmanship. Acoustical Solutions bears no responsibility for installation or contractor selection. Please contact a sales representative if you have questions, concerns or specific project requirements.


Be sure to inspect materials upon delivery. Please note any damage on the delivery ticket and notify Acoustical Solutions immediately. Materials should be stored in original packing in a clean, climate controlled environment free of moisture. Installation should not commence until building is enclosed and under standard occupancy conditions and surfaces are of acceptable condition and properly prepared. Do not install materials of unacceptable quality.

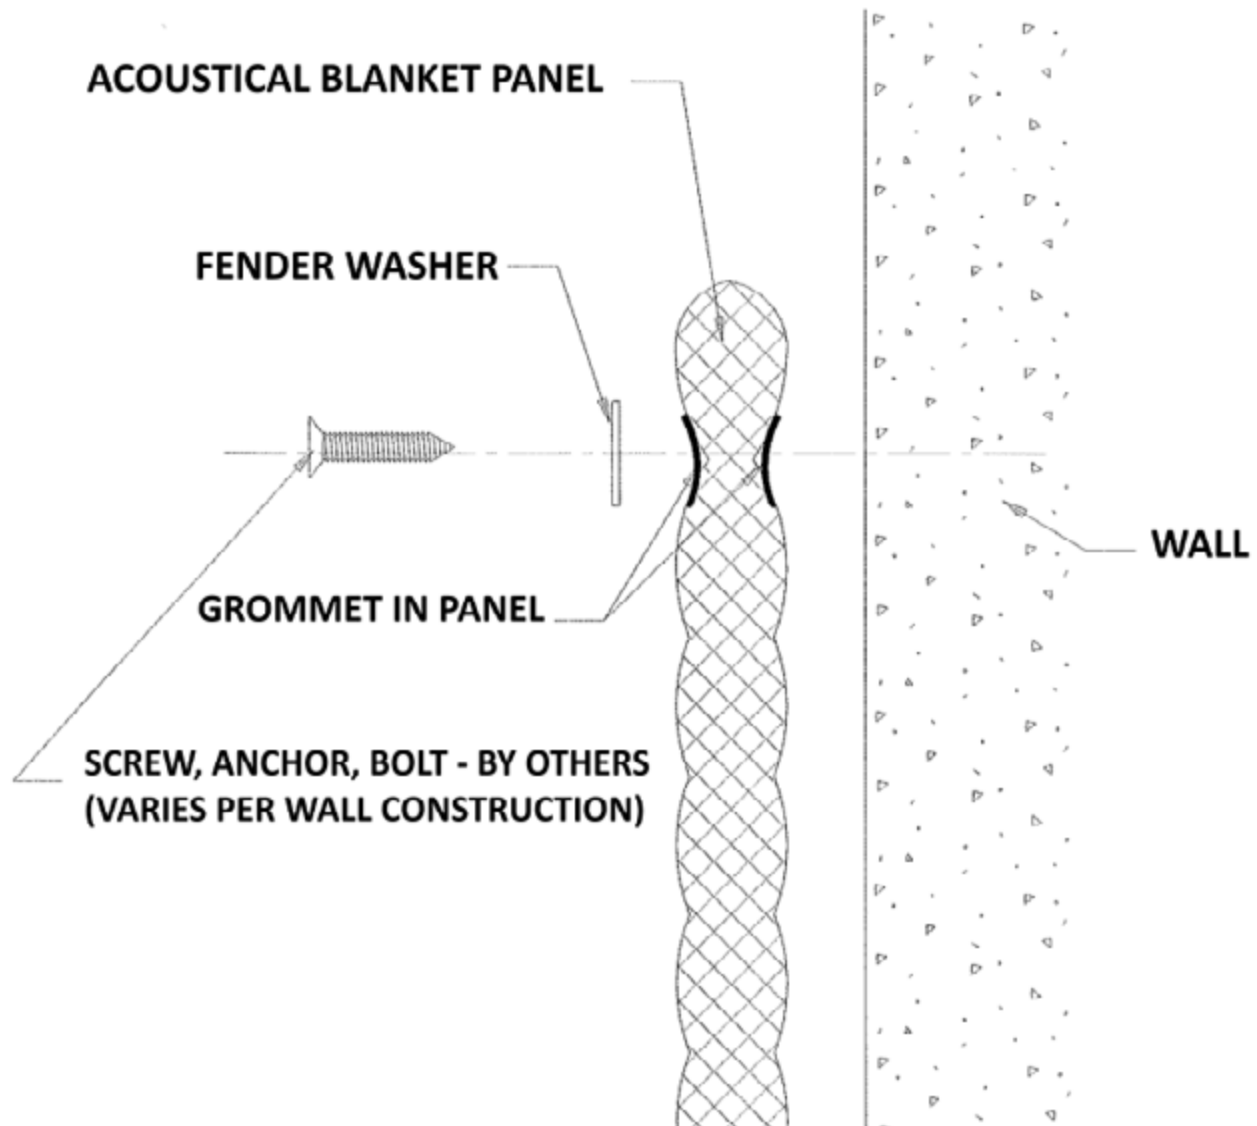


PRIVACYSHIELD[®] DUAL-SIDED ABSORPTIVE SOUNDPROOFING BLANKET INSTALL GUIDE

WALL MOUNT WITH BATTENS

STEP 1) HOLD PANEL AGAINST WALL (or optional batten strip)

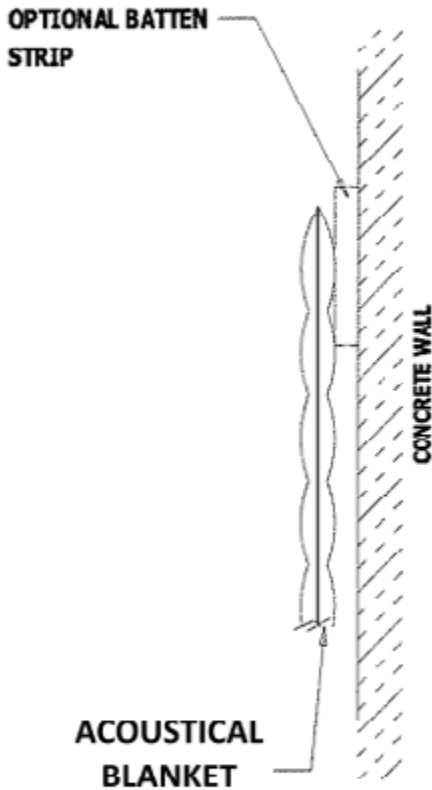

STEP 2) SECURE PANEL TO WALL WITH FASTENER THRU A FENDER WASHER AND BATTEN STRIP

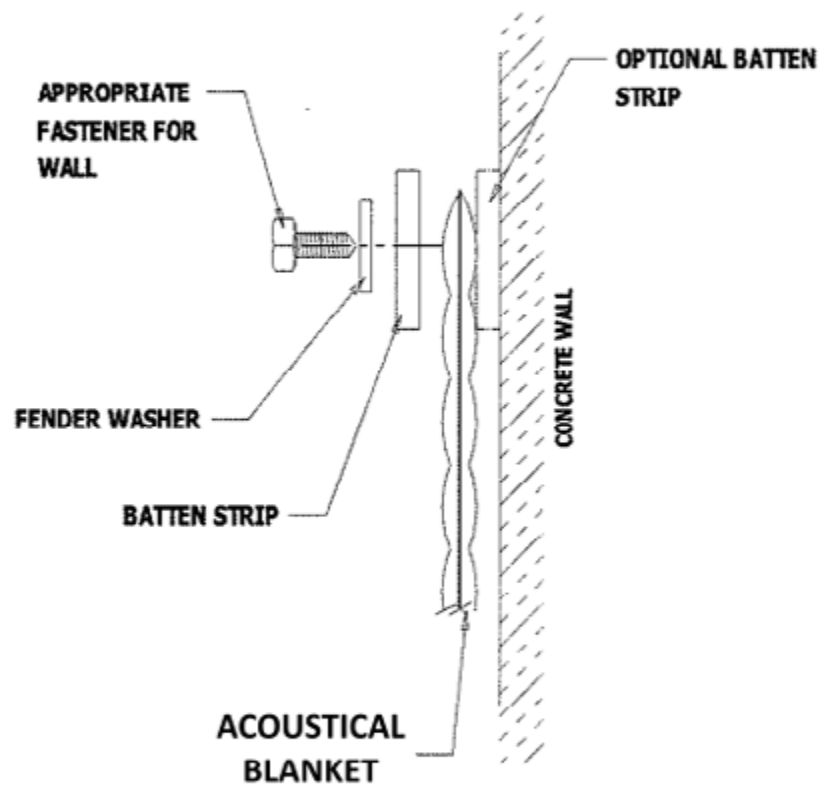


FOR ADDITIONAL SUPPORT, BATTEN STRIPS CAN BE USED AROUND THE PERIMETER OF THE PANEL (AND ACROSS THE PANEL FOR VERY LONG PANELS)



PRIVACYSHIELD[®] DUAL-SIDED ABSORPTIVE SOUNDPROOFING BLANKET INSTALL GUIDE

FIXED MOUNTING ANGLE

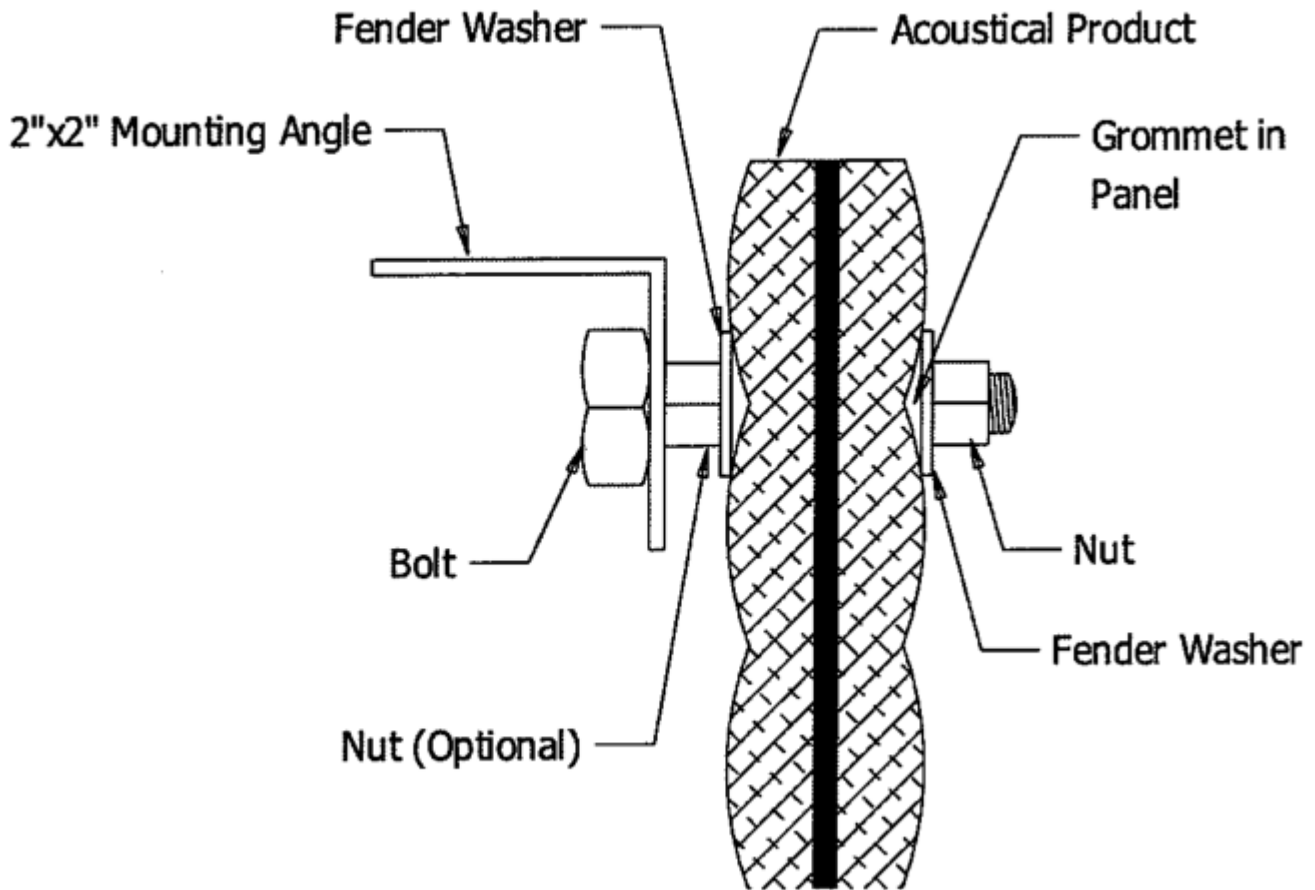

PRIVACYSHIELD[®] DUAL-SIDED ABSORPTIVE SOUNDPROOFING BLANKET INSTALL GUIDE

PLENUM CURTAIN INSTALLATION DETAIL

