



**PRIVACYSHIELD<sup>®</sup> OUTDOOR ABSORPTIVE SOUNDPROOFING BLANKET INSTALL GUIDE**

The following installation instructions are given as a general guide to avoid common errors. Installer should follow best practices for construction and workmanship. Acoustical Solutions bears no responsibility for installation or contractor selection. Please contact a sales representative if you have questions, concerns or specific project requirements.

Be sure to inspect materials upon delivery. Please note any damage on the delivery ticket and notify Acoustical Solutions immediately. Materials should be stored in original packing in a clean, climate controlled environment free of moisture. Installation should not commence until building is enclosed and under standard occupancy conditions and surfaces are of acceptable condition and properly prepared. Do not install materials of unacceptable quality.

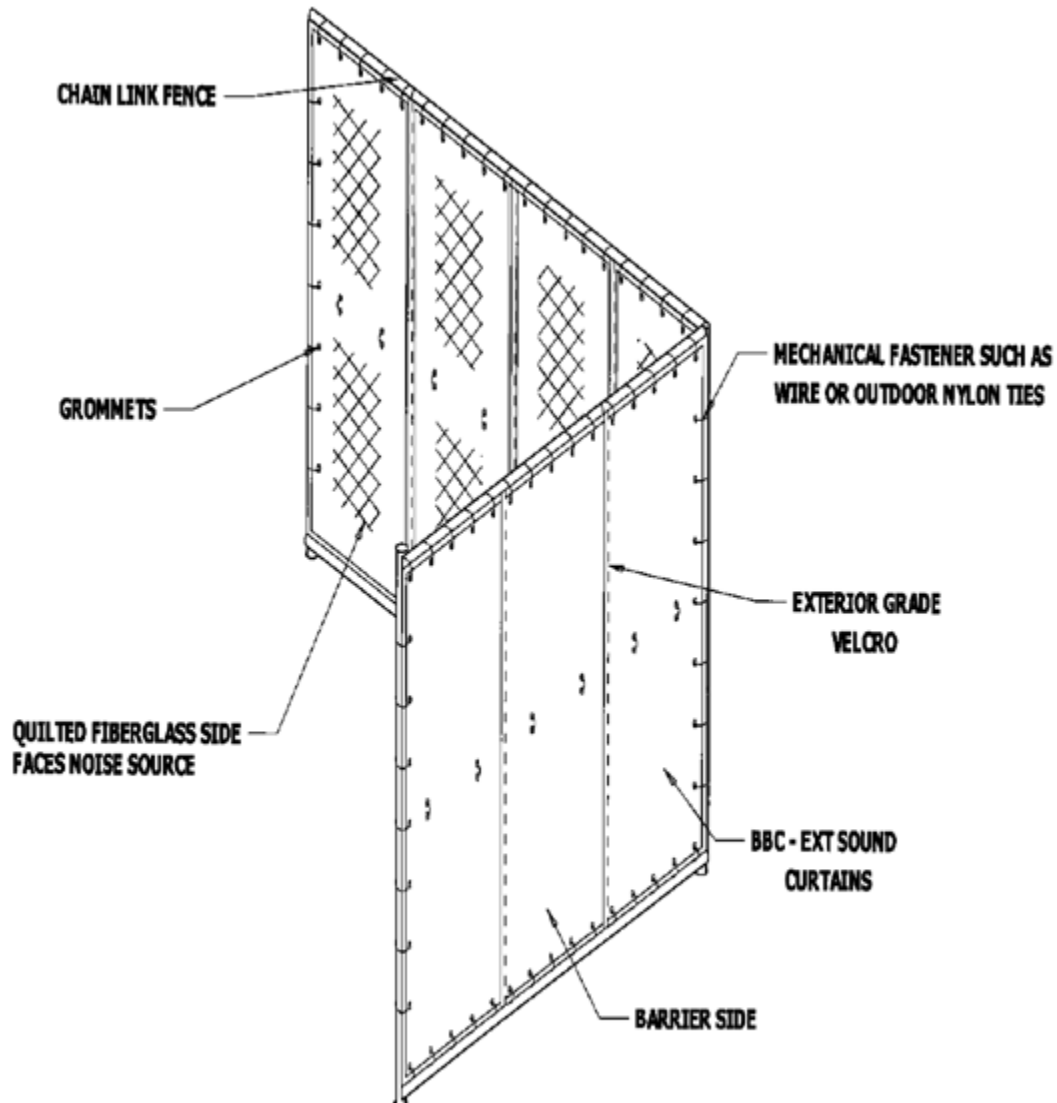


**PRIVACYSHIELD<sup>®</sup> OUTDOOR ABSORPTIVE SOUNDPROOFING BLANKET INSTALL GUIDE**

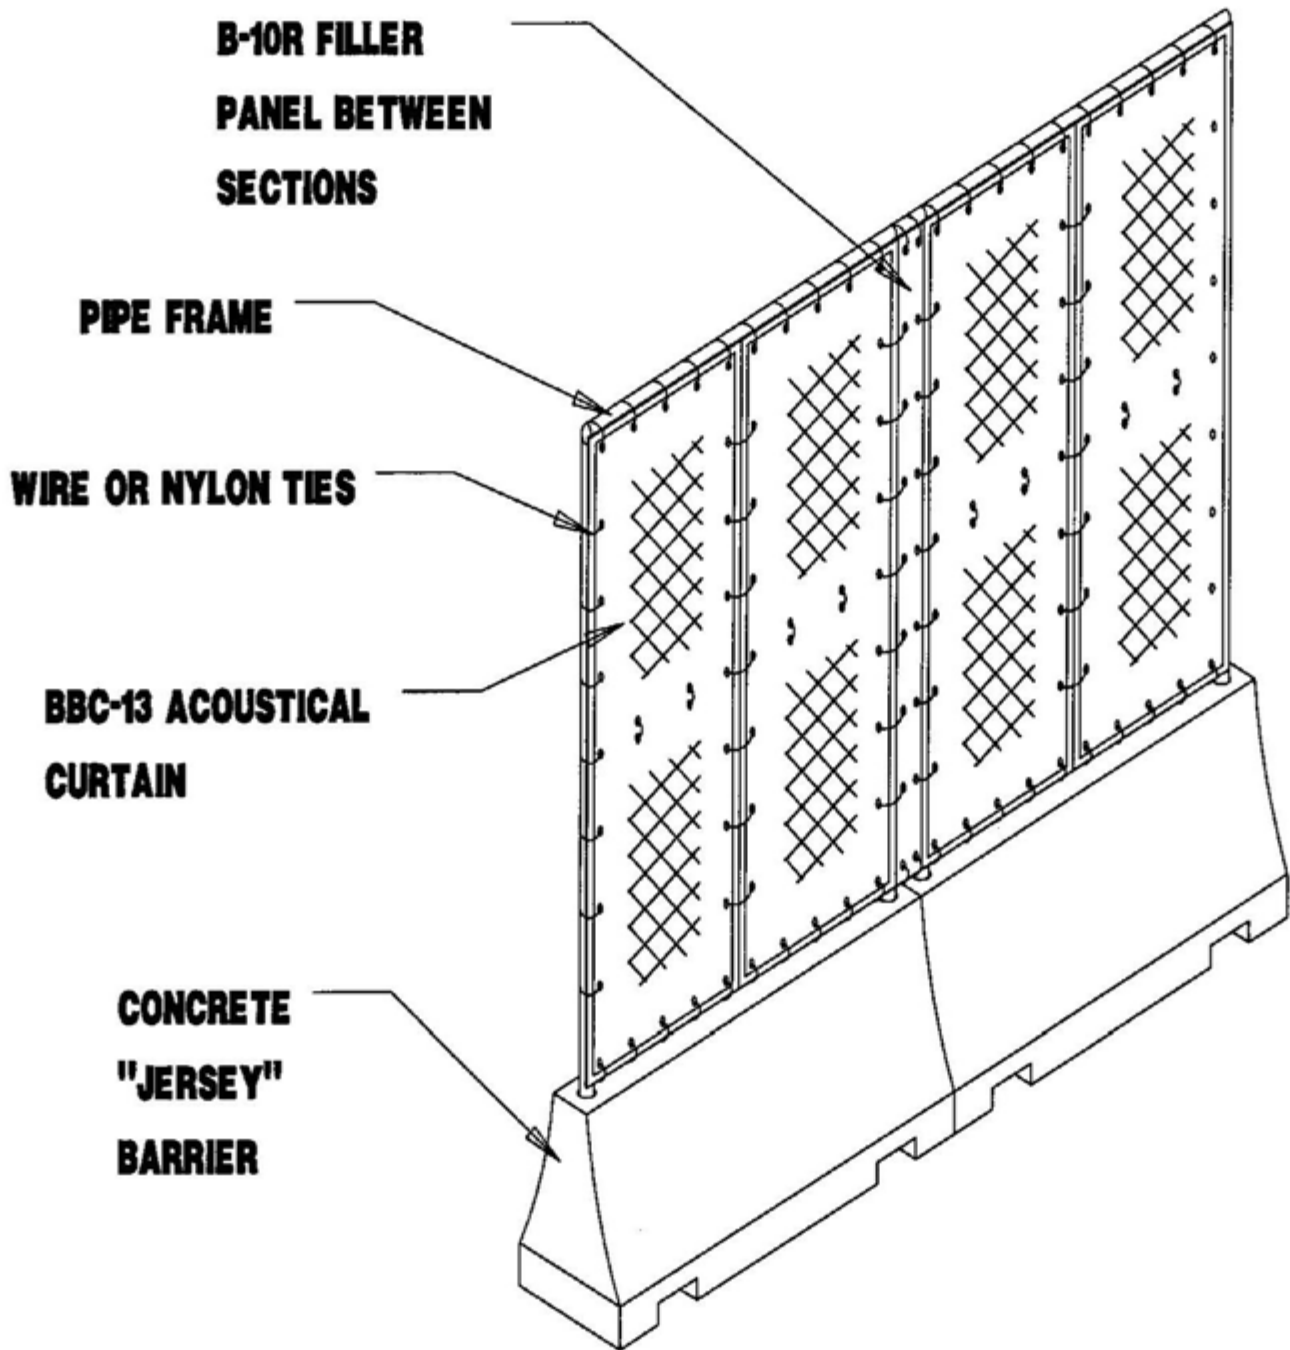

**TEMPORARY CONSTRUCTION NOISE BARRIER**




**PRIVACYSHIELD<sup>®</sup> OUTDOOR ABSORPTIVE SOUNDPROOFING BLANKET INSTALL GUIDE**

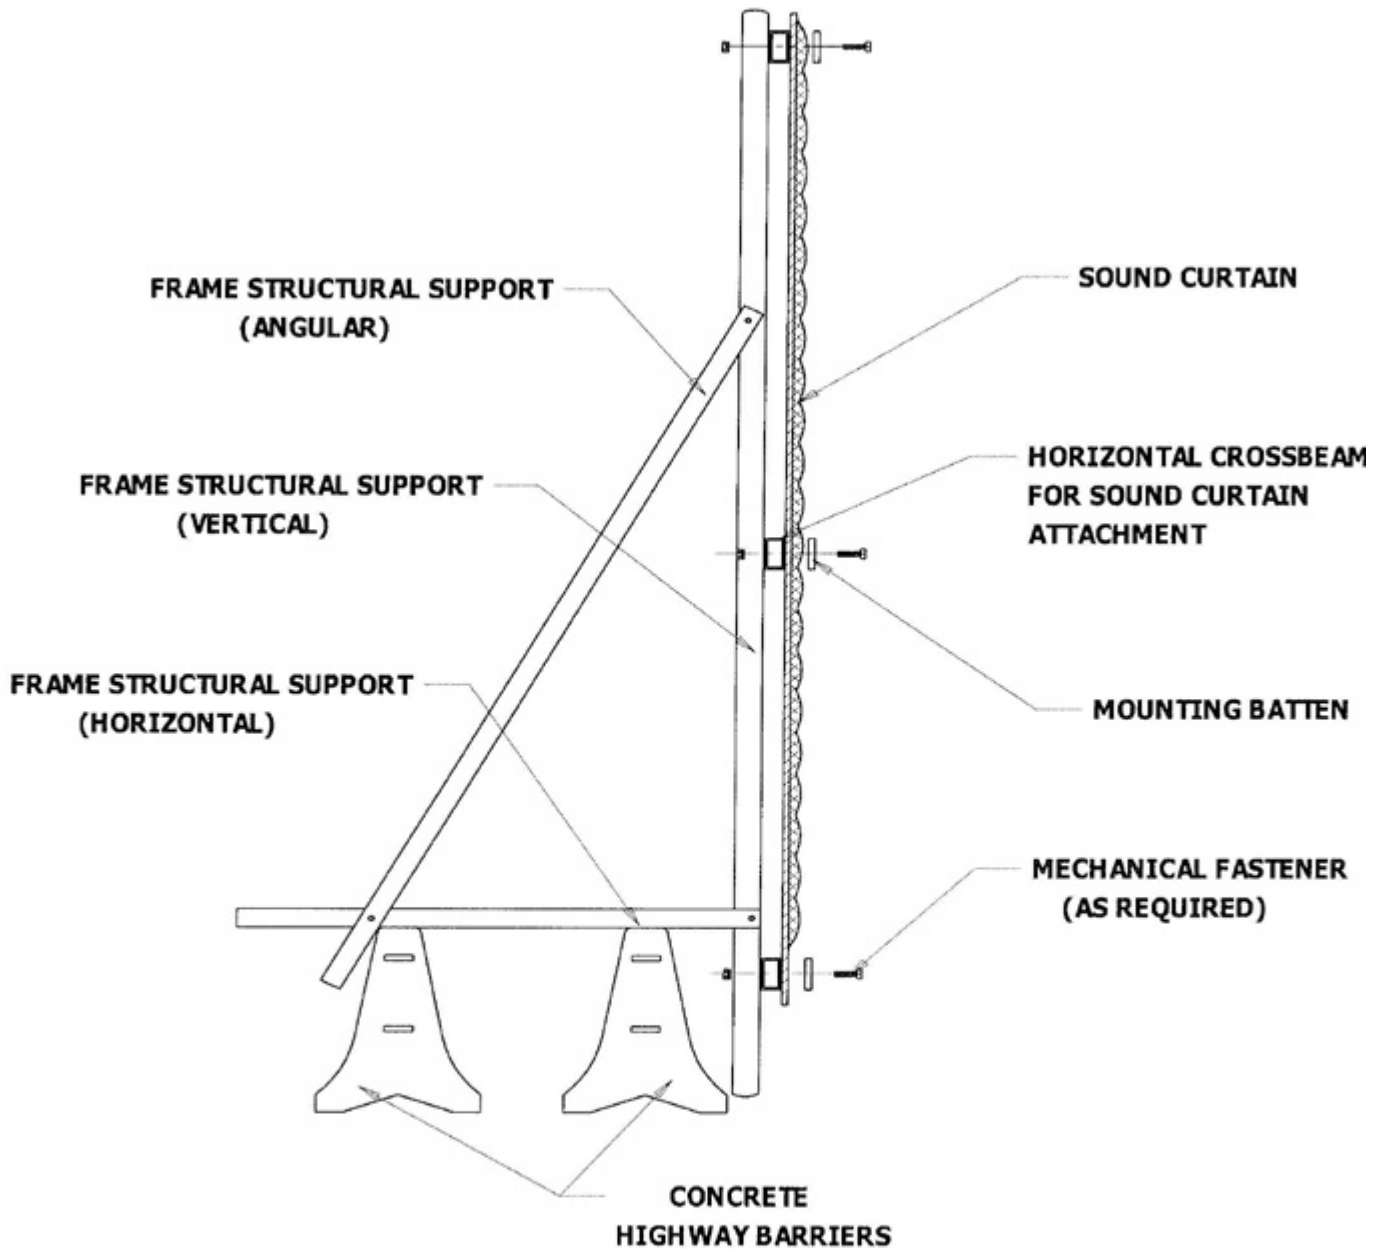


**SOUND CURTAINS  
TEMPORARY INSTALLATION SYSTEM  
DOUBLE CONCRETE HIGHWAY BARRIERS**



**PRIVACYSHIELD<sup>®</sup> OUTDOOR ABSORPTIVE SOUNDPROOFING BLANKET INSTALL GUIDE**

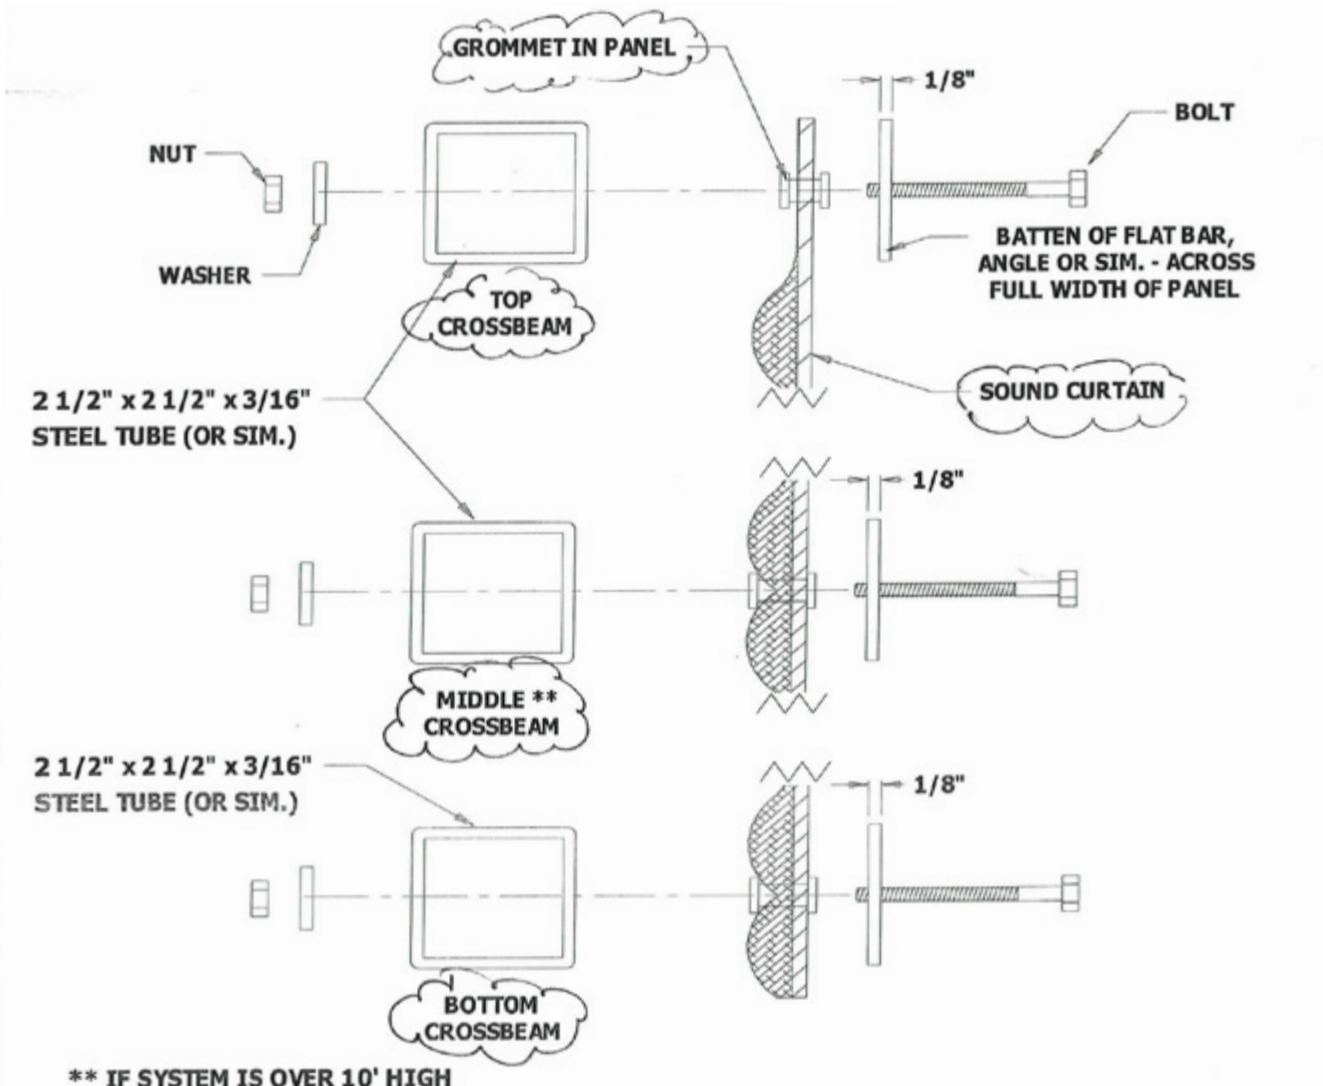

**NOTE: SIZING AND SPACING OF VERTICAL COLUMNS OR POSTS TO BE DETERMINED BY STRUCTURAL ENGINEER.**

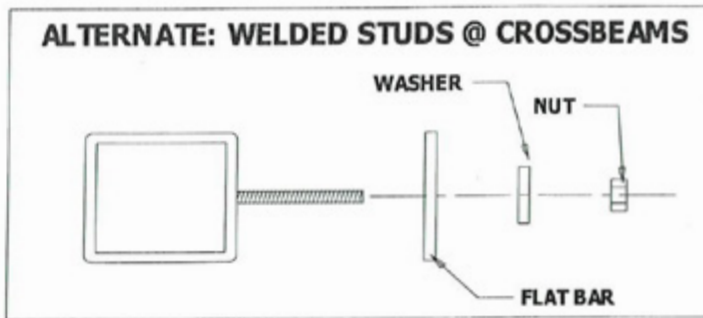

**DETAIL: ATTACHMENT OF SOUND CURTAIN TO HORIZONTAL STRUCTURAL STEEL SUPPORTS**

