



FABRIC WRAPPED CLOUDS INSTALLATION GUIDE — CABLES AND ROTOFAST ANCHORS

INSTALLATION OF FABRIC WRAPPED CEILING CLOUDS WITH CABLES OR TIE-WIRE AND ROTOFAST ANCHORS


Secure eye hooks, wire or other hardware as provided by installer into ceiling substrate. Secure tie wire to mounting provisions on the back of the ceiling cloud panel and to the hardware installed in the ceiling substrate.

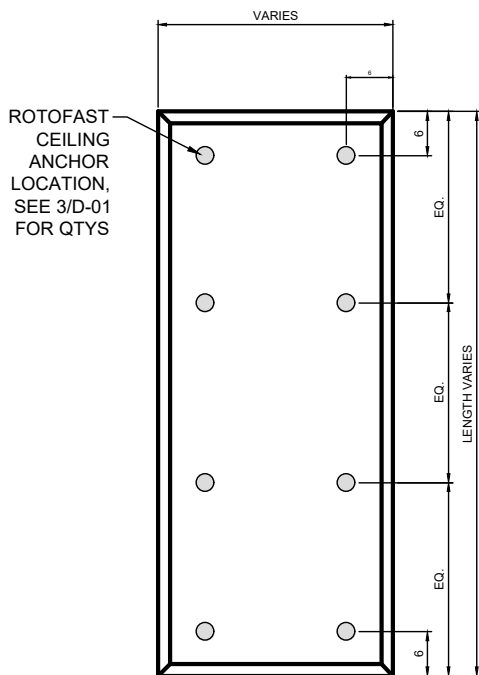

1
D-01
SCALE: NA
ROTOFAST CEILING ANCHOR ATTACHMENT

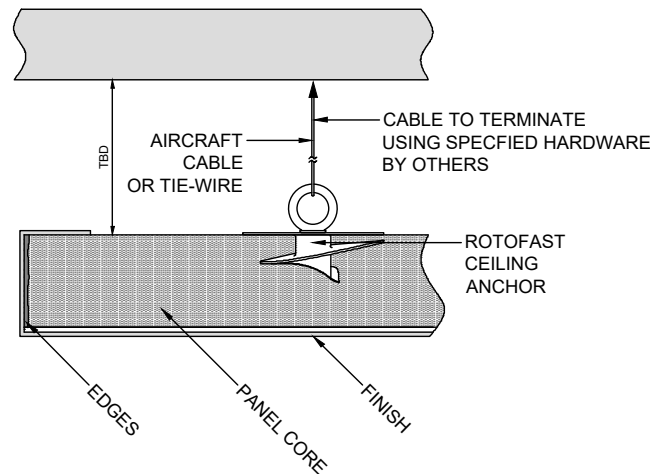

2
D-01
SCALE: NA
ROTOFAST CLOUD MOUNT ATTACHMENT

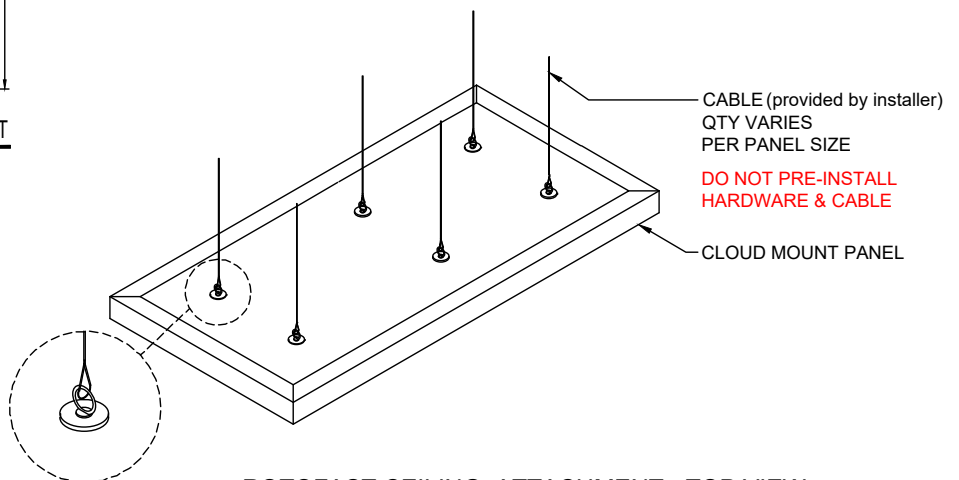


4
D-01
SCALE: NA
ROTOFAST CEILING ATTACHMENT - TOP VIEW

Please Note: These installation instructions are given as a general guide to avoid common errors. Installer should follow best practices for construction and workmanship. Acoustical Solutions bears no responsibility for installation or contractor selection. Please contact a sales representative if you have questions, concerns or specific project requirements.


Be sure to inspect materials upon delivery. Please note any damage on the delivery ticket and notify Acoustical Solutions immediately. Materials should be stored in original packing in a clean, climate controlled environment free of moisture. Installation should not commence until building is enclosed and under standard occupancy conditions and surfaces are of clean, acceptable condition and properly prepared. Installation is best done at the end of a construction project. Do not install materials of unacceptable quality.




FABRIC WRAPPED CLOUDS INSTALLATION GUIDE — CABLES AND ROTOFAST ANCHORS

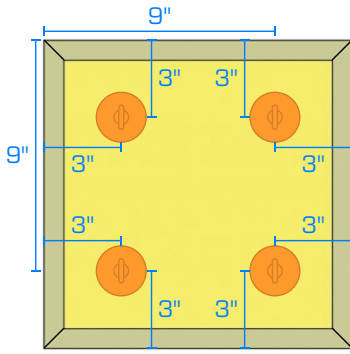


1' X 1' PANEL

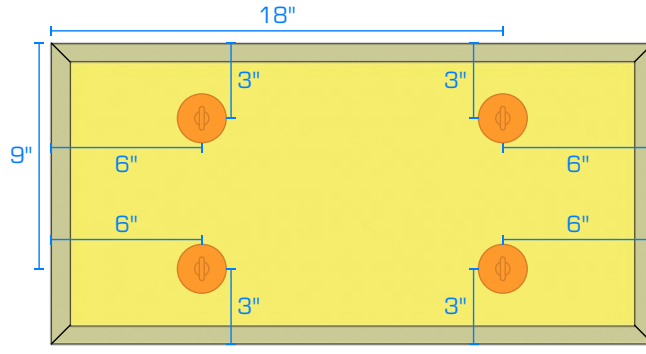


1' X 2' PANEL

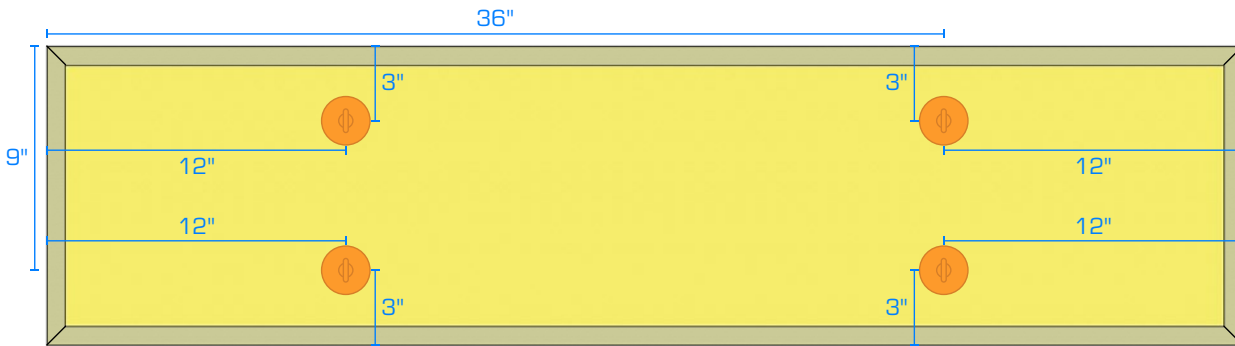

1' X 4' PANEL

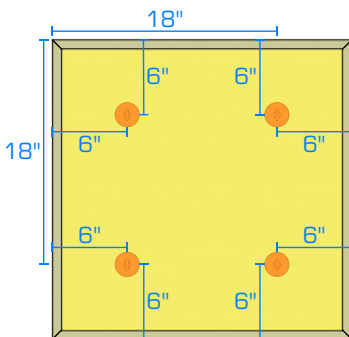


2' X 2' PANEL

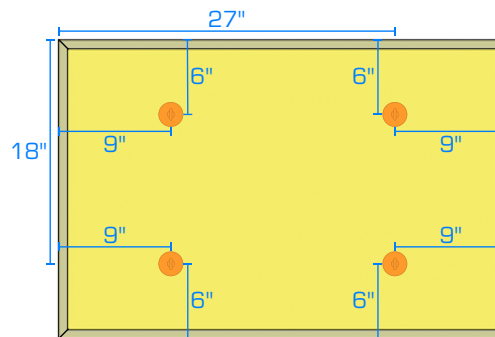


2' X 3' PANEL




FABRIC WRAPPED CLOUDS INSTALLATION GUIDE — CABLES AND ROTOFAST ANCHORS

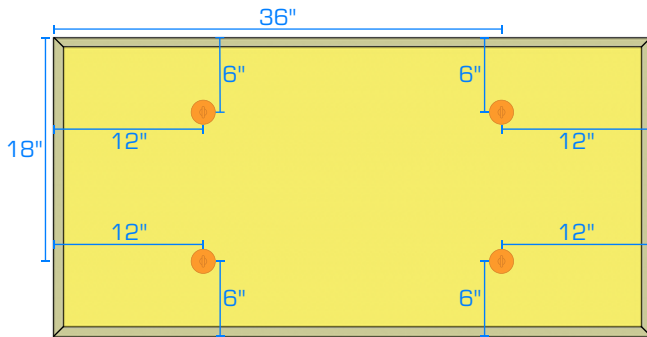


2' X 4' PANEL

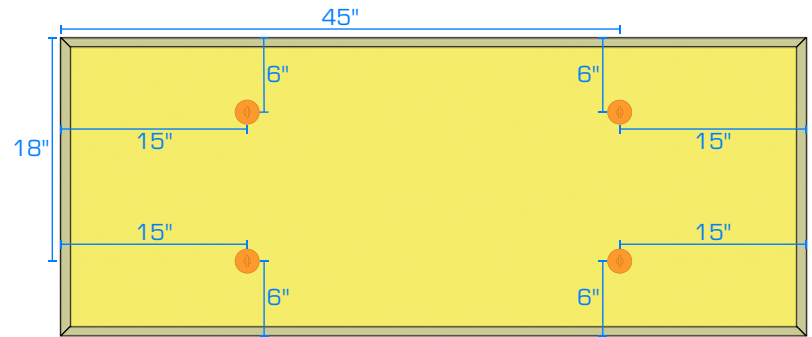

2' X 5' PANEL

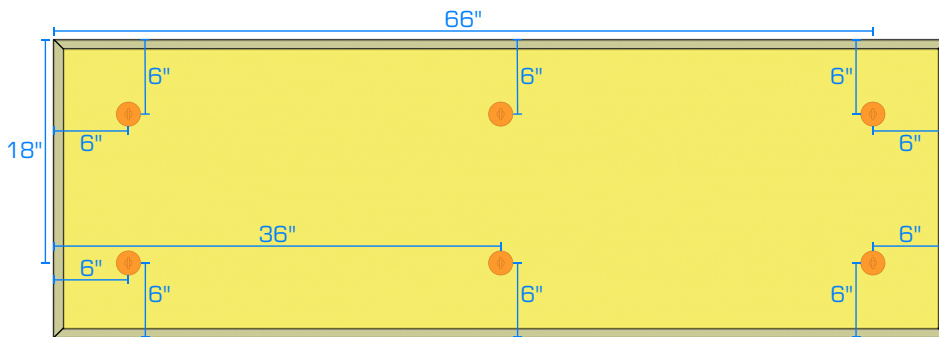


2' X 6' PANEL

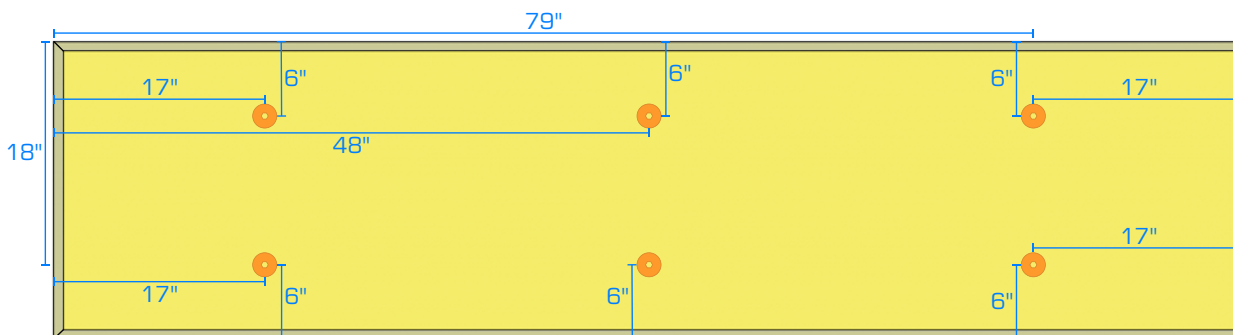


2' X 8' PANEL




FABRIC WRAPPED CLOUDS INSTALLATION GUIDE — CABLES AND ROTOFAST ANCHORS

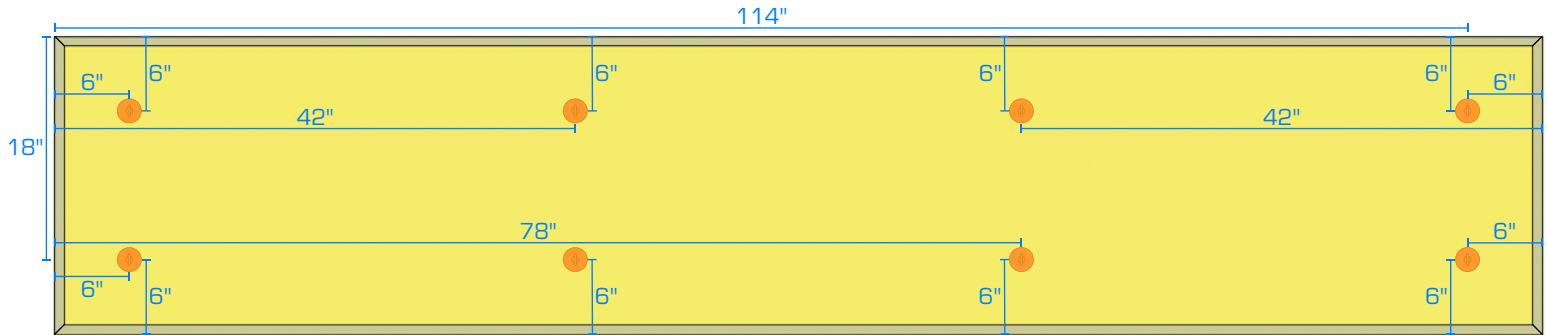


2' X 10' PANEL

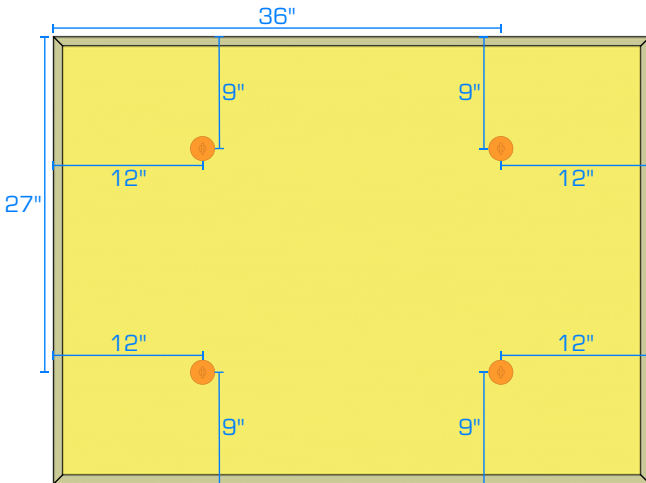


3' X 4' PANEL

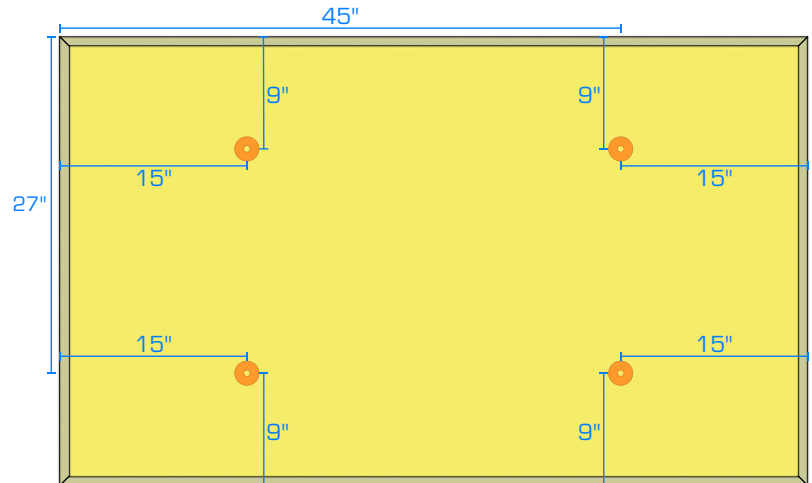

3' X 5' PANEL

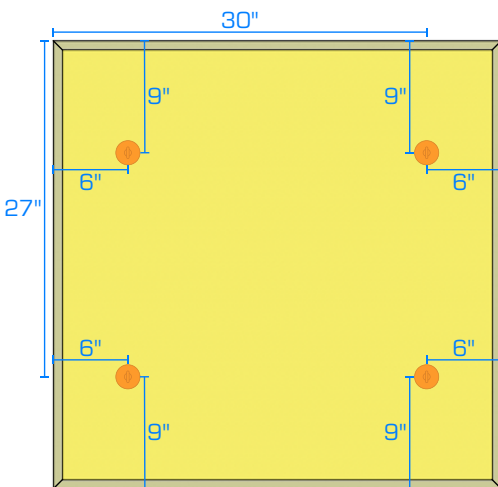


3' X 3' PANEL

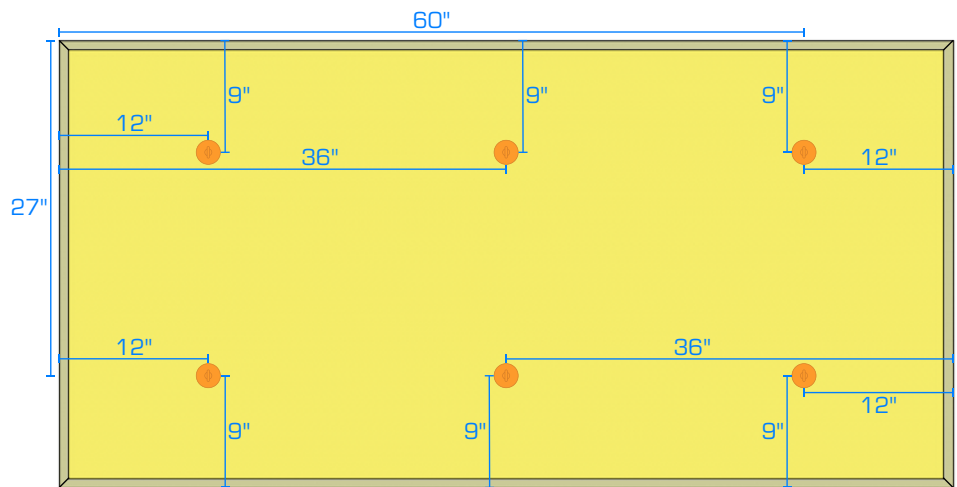


3' X 6' PANEL



FABRIC WRAPPED CLOUDS INSTALLATION GUIDE — CABLES AND ROTOFAST ANCHORS

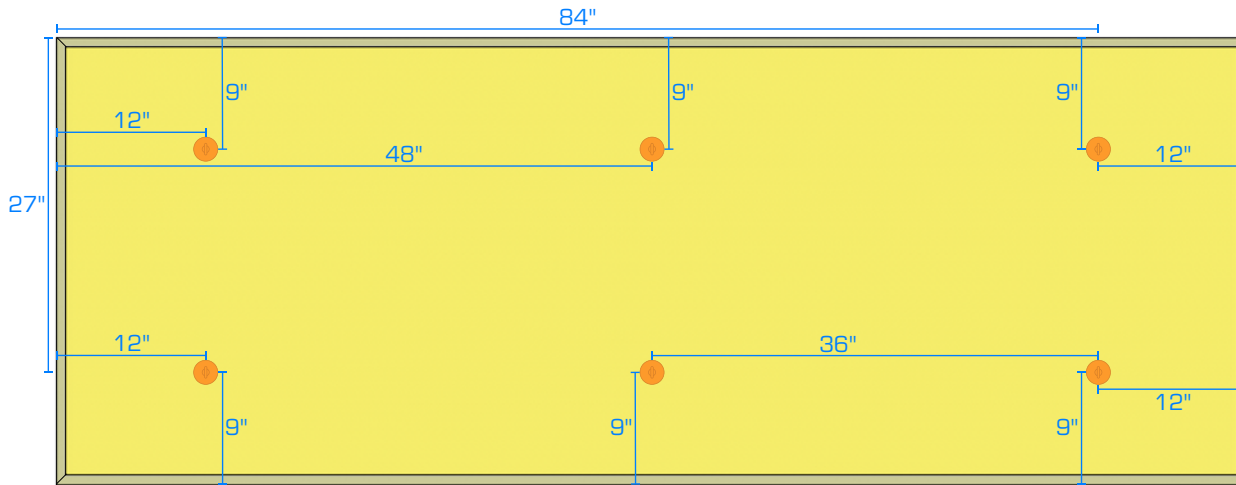


3' X 8' PANEL

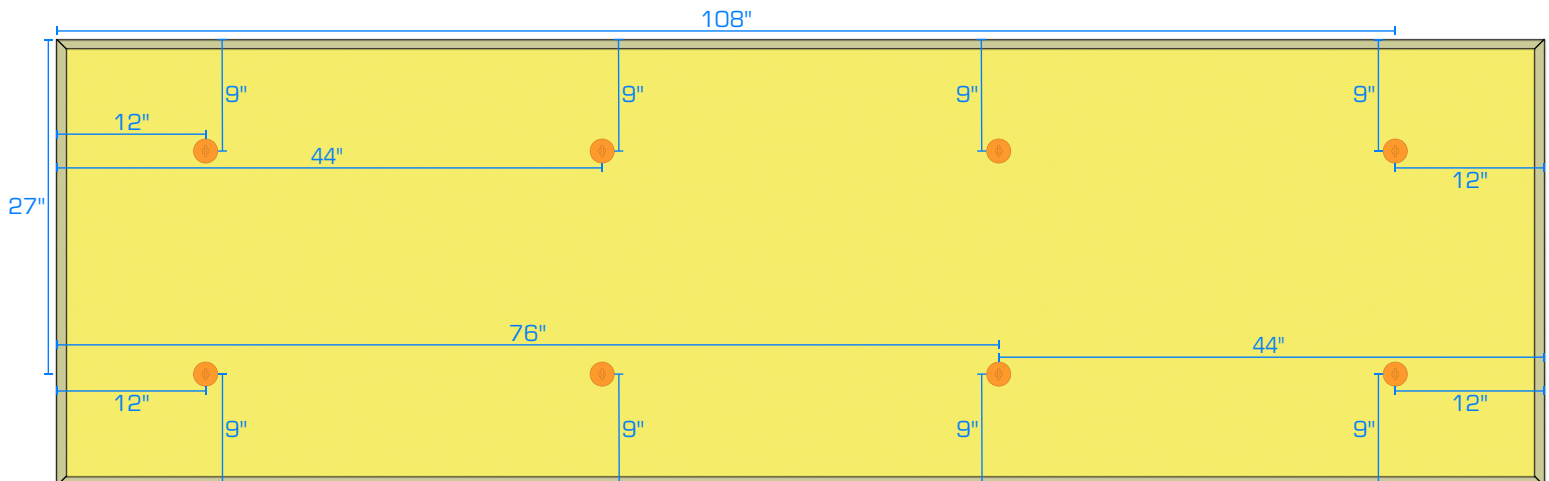


3' X 10' PANEL




FABRIC WRAPPED CLOUDS INSTALLATION GUIDE — CABLES AND ROTOFAST ANCHORS

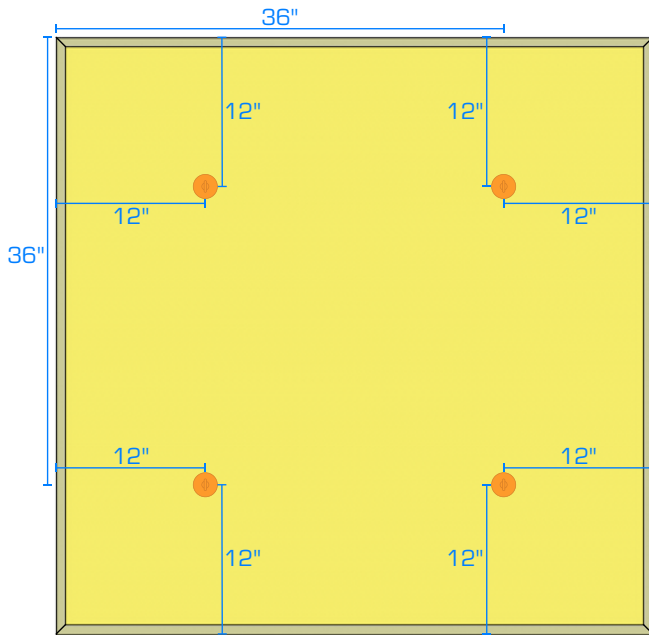

4' X 4' PANEL

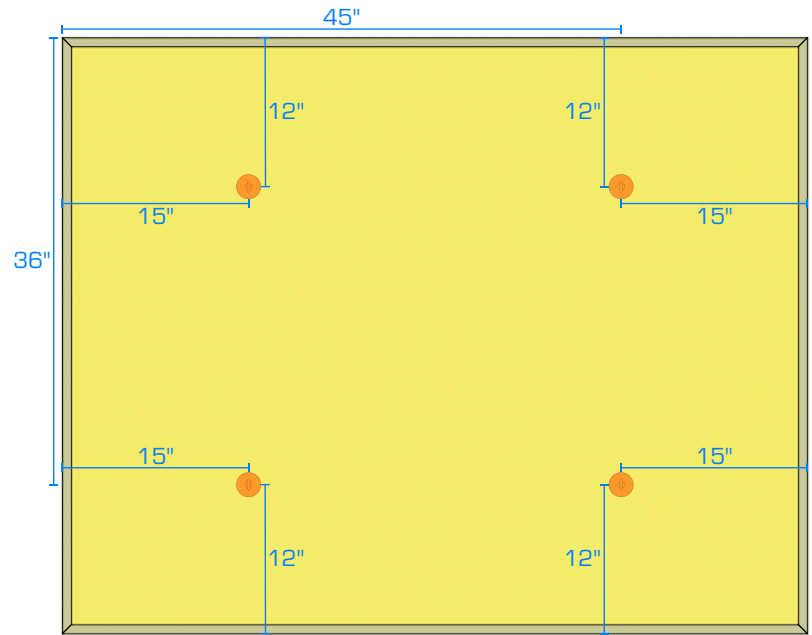


4' X 5' PANEL

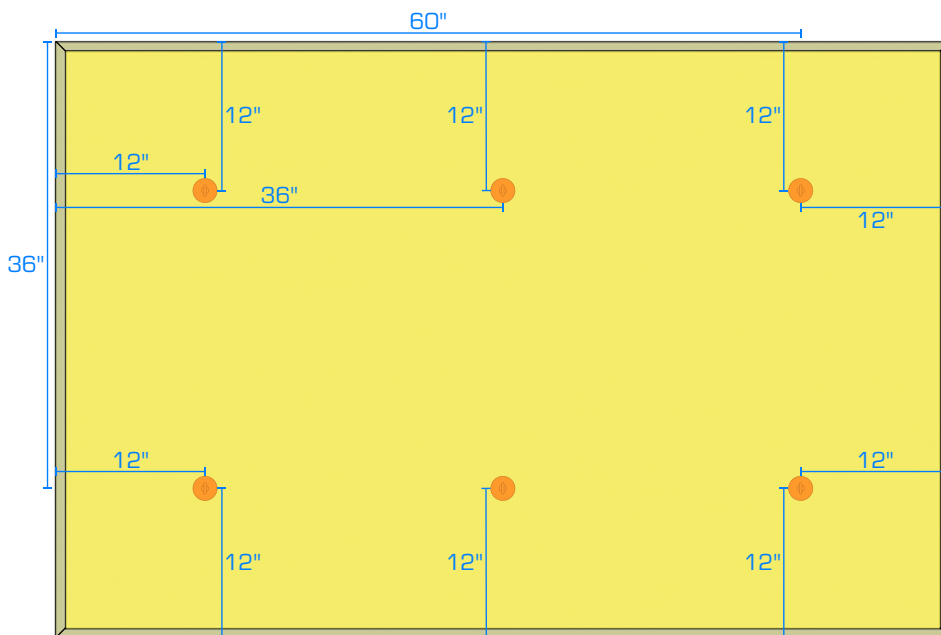


4' X 6' PANEL



FABRIC WRAPPED CLOUDS INSTALLATION GUIDE — CABLES AND ROTOFAST ANCHORS

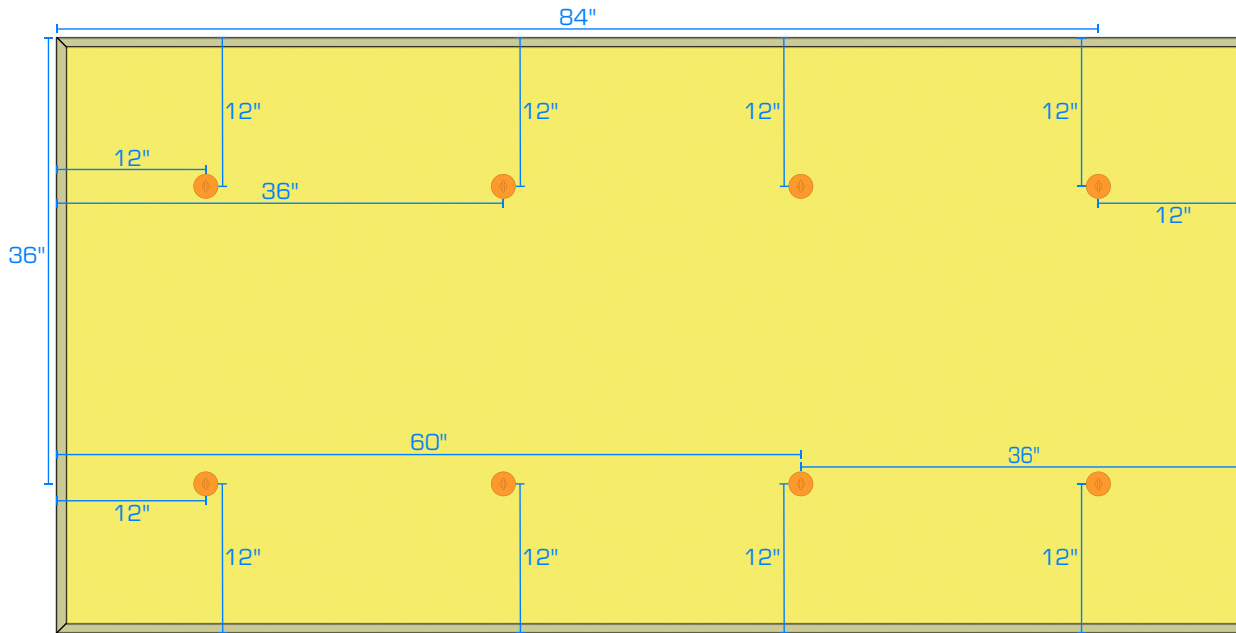

4' X 8' PANEL

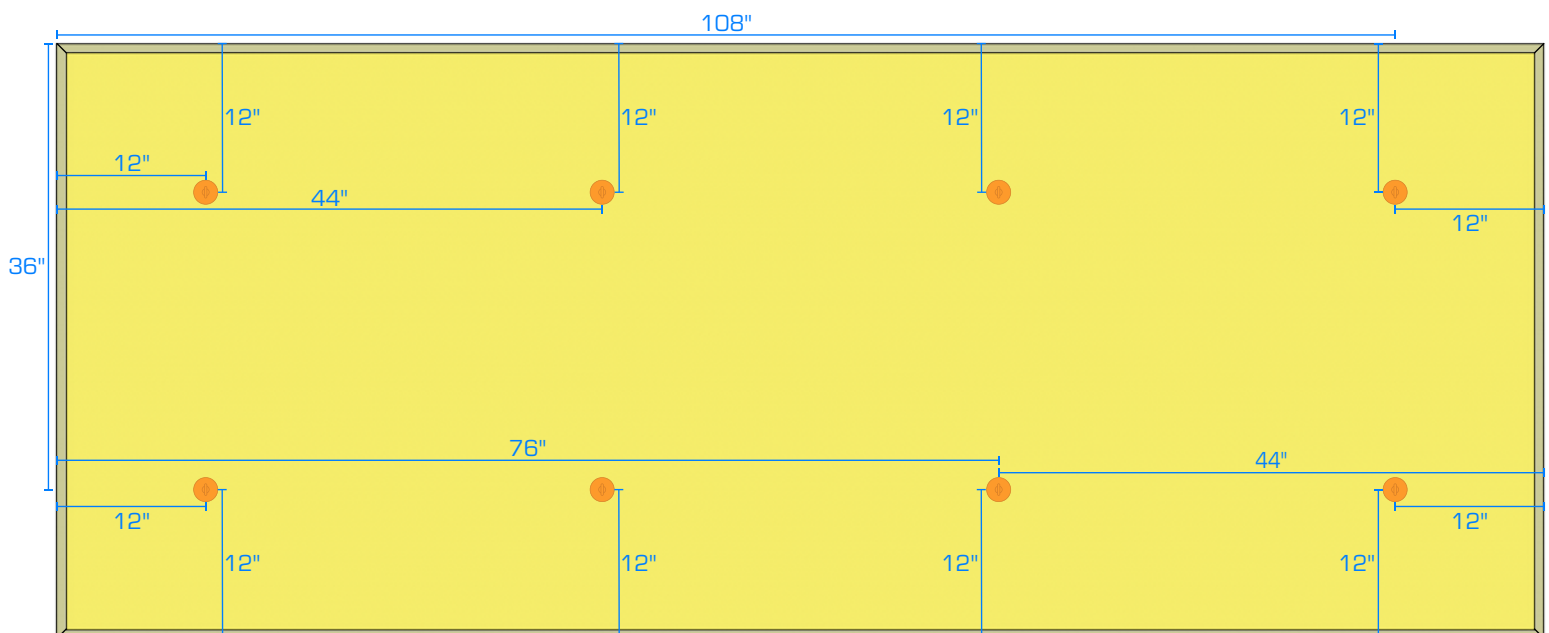

4' X 10' PANEL




FABRIC WRAPPED CLOUDS INSTALLATION GUIDE — FLUSH MOUNT ROTOFAST ANCHORS




STEP 1

In most cases, the Rotofast Snap-On anchors will be factory mounted into the back of the acoustical panel. If so, continue to step 2. If not, screw the Rotofast Snap-On Anchors into the back of the panel using a hex driver tool.

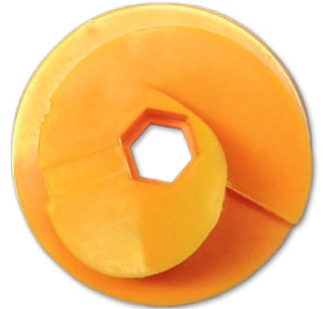


STEP 2

Insert the marking plugs into the Rotofast Snap-On Anchors. The point of the marking plug should be facing away from the back of the panel.

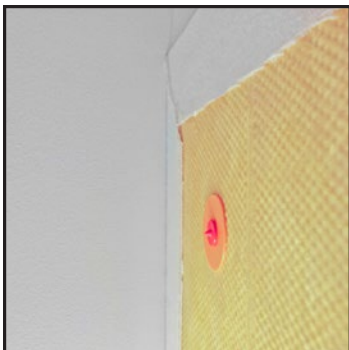

STEP 3


Push the panel firmly against the wall to mark all anchor locations.

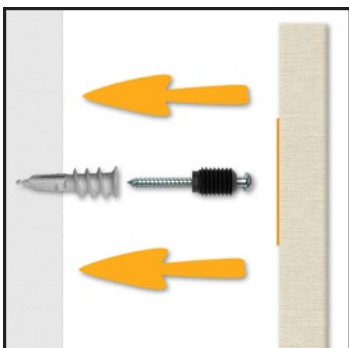


STEP 4

Screw Ratchets to wall at marked locations using appropriate wall or ceiling anchors. EZ anchors are provided for use with drywall only. Use other anchors as required. Once ratchets are secured to the wall, firmly push the panel anchors onto ratchets to complete installation.


Note direction of ratchet — angled edges face toward screwhead while flat edges face toward drywall.

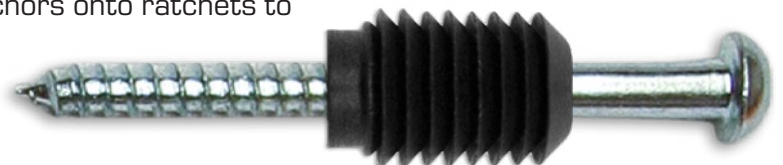


FABRIC WRAPPED CLOUDS INSTALLATION GUIDE — FLUSH MOUNT ROTOFAST ANCHORS

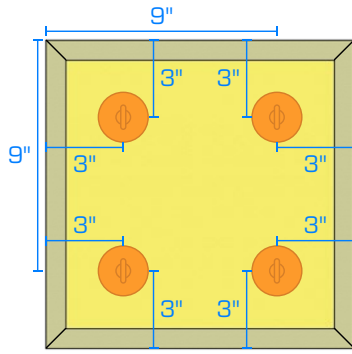


1' X 1' PANEL

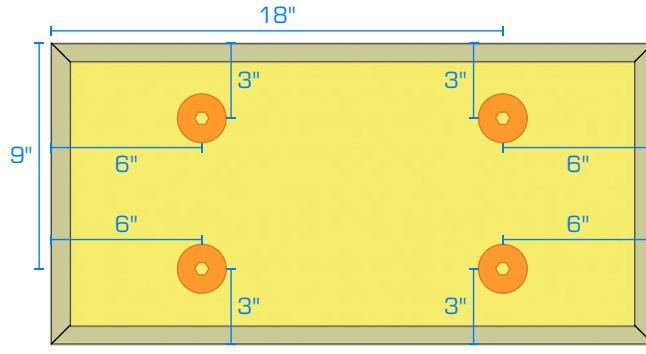


1' X 2' PANEL

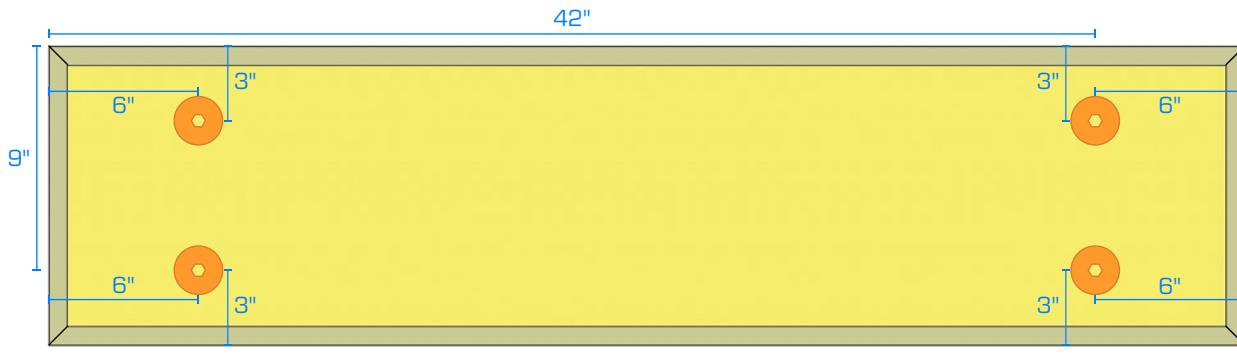

1' X 4' PANEL

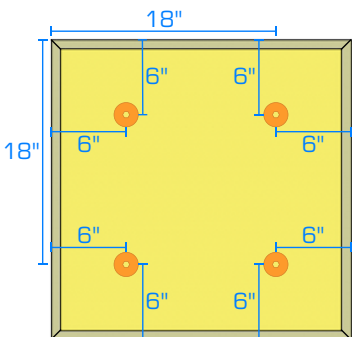


2' X 2' PANEL

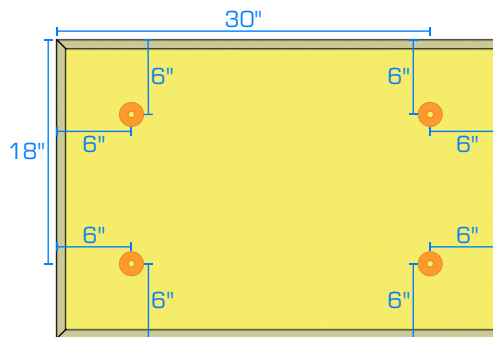


2' X 3' PANEL




FABRIC WRAPPED CLOUDS INSTALLATION GUIDE — FLUSH MOUNT ROTOFAST ANCHORS

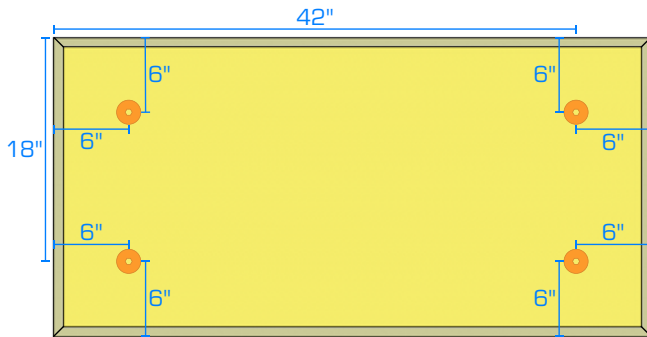


2' X 4' PANEL

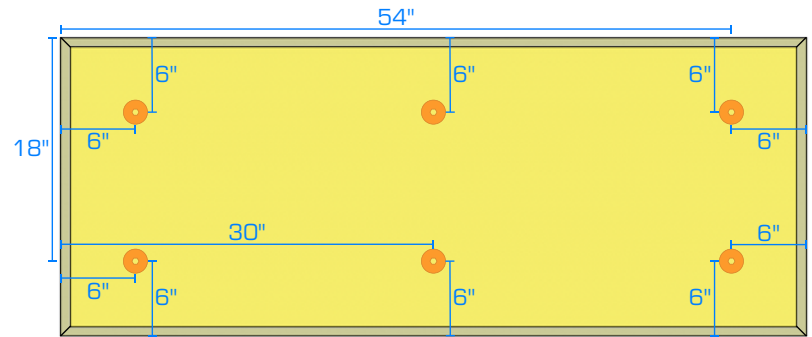

2' X 5' PANEL

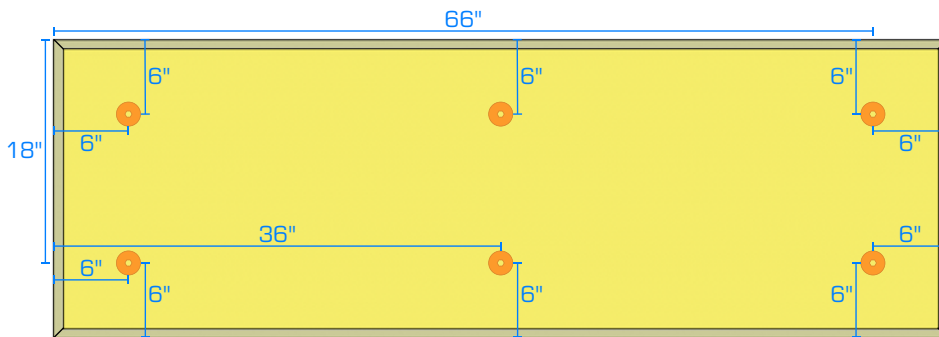


2' X 6' PANEL

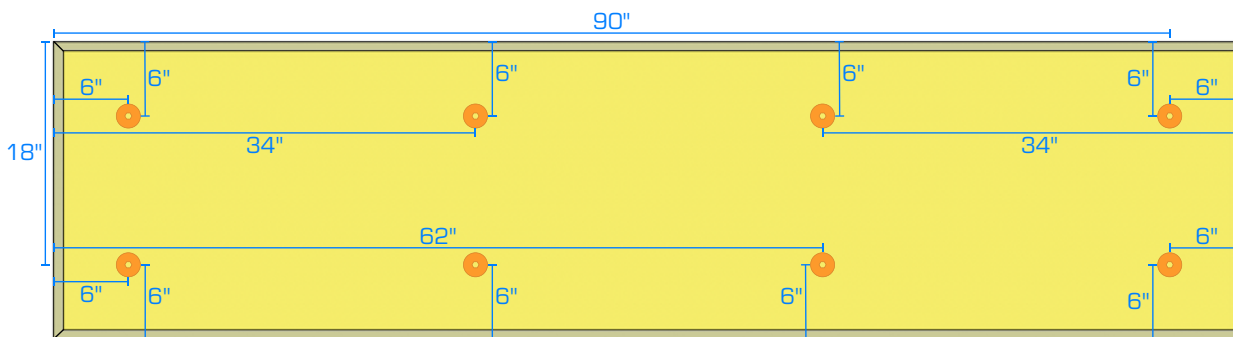


2' X 8' PANEL




FABRIC WRAPPED CLOUDS INSTALLATION GUIDE — FLUSH MOUNT ROTOFAST ANCHORS

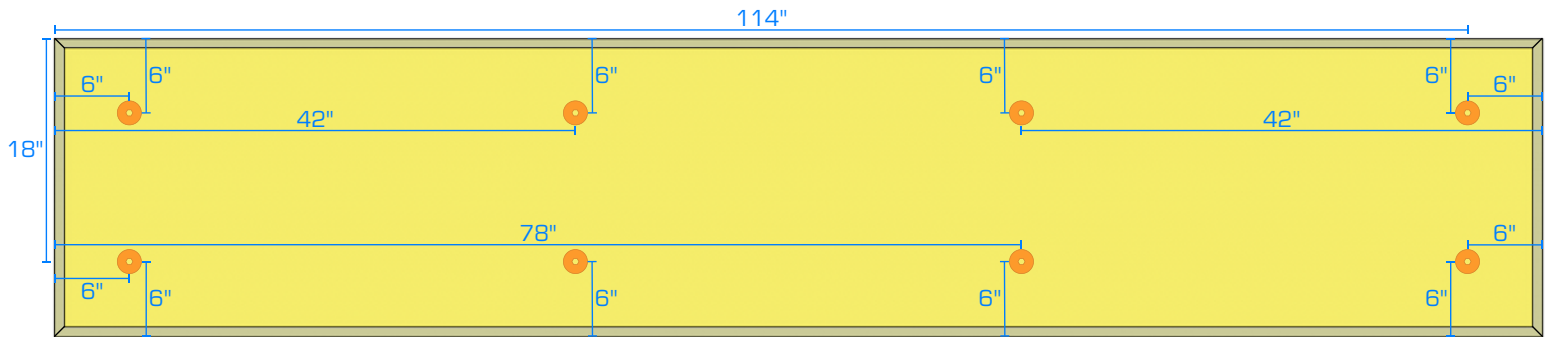


2' X 10' PANEL

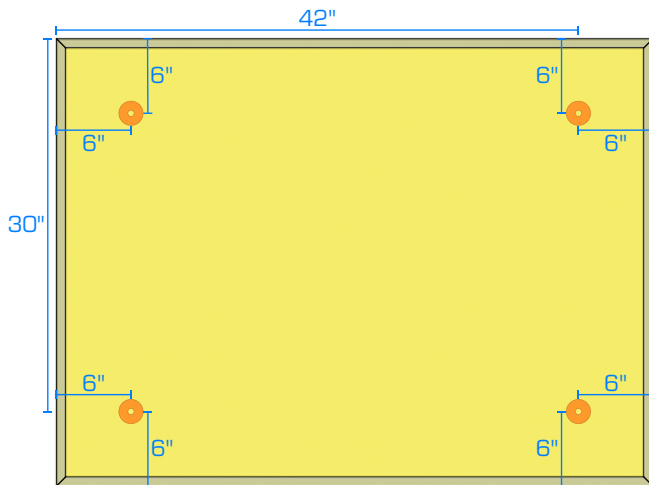


3' X 4' PANEL

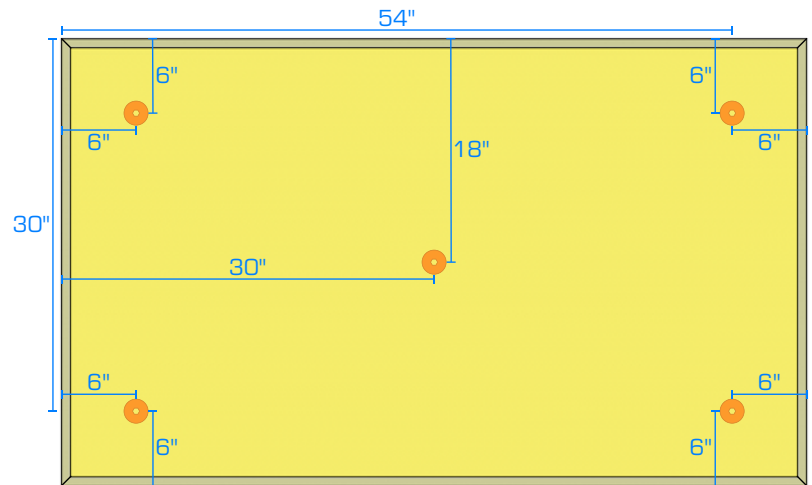

3' X 5' PANEL

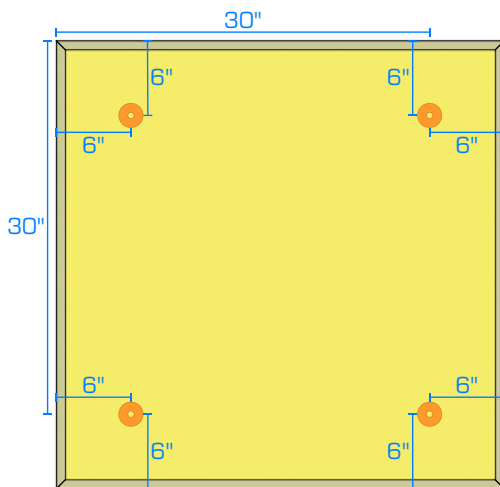


3' X 3' PANEL

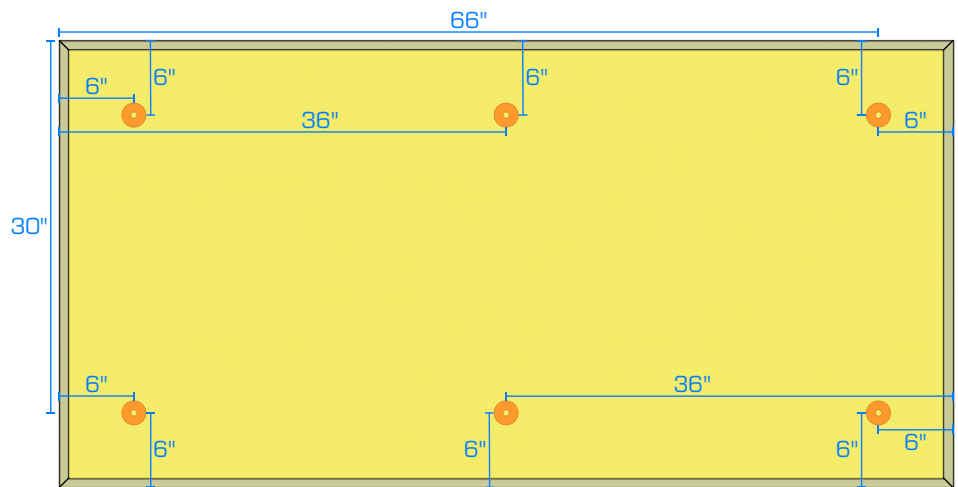


3' X 6' PANEL



FABRIC WRAPPED CLOUDS INSTALLATION GUIDE — FLUSH MOUNT ROTOFAST ANCHORS

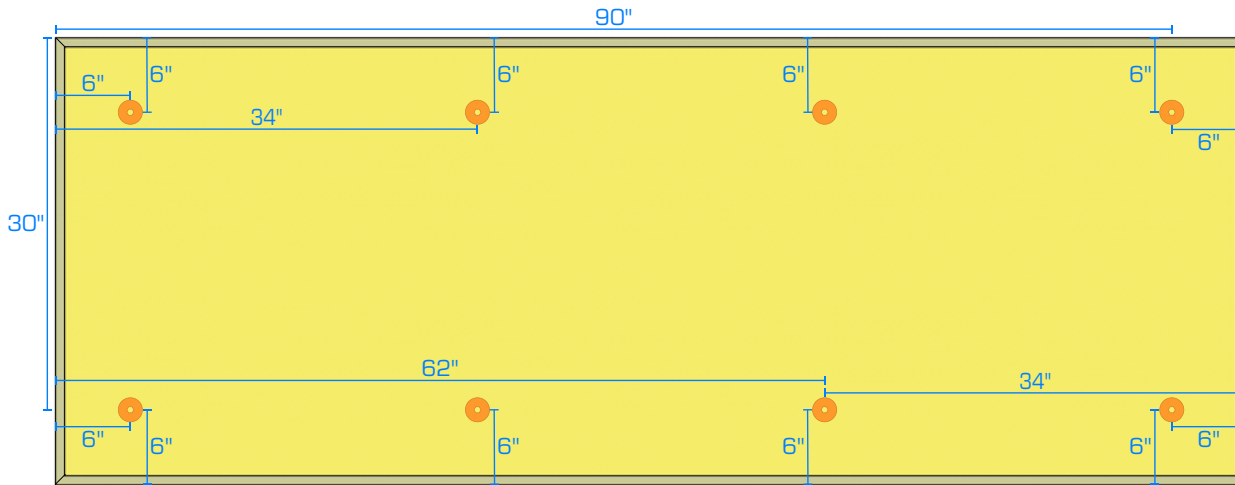


3' X 8' PANEL

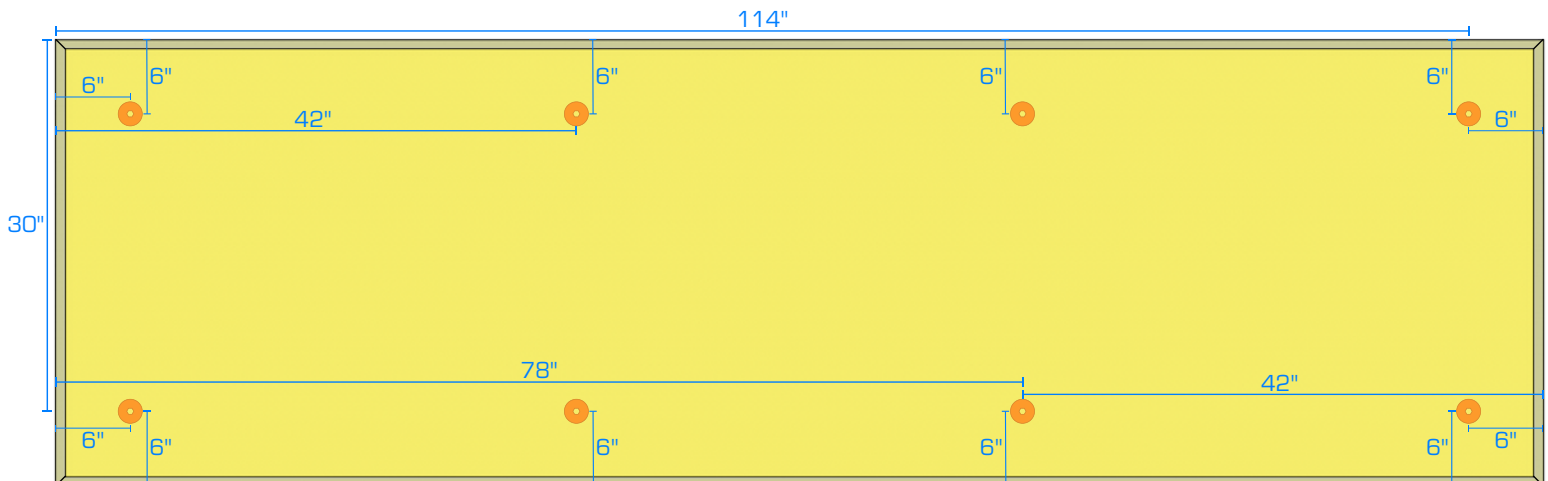


3' X 10' PANEL




FABRIC WRAPPED CLOUDS INSTALLATION GUIDE — FLUSH MOUNT ROTOFAST ANCHORS

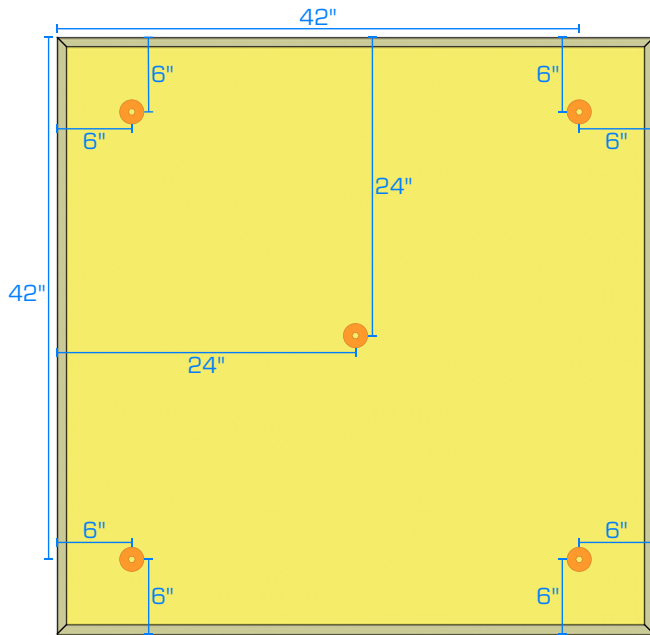

4' X 4' PANEL

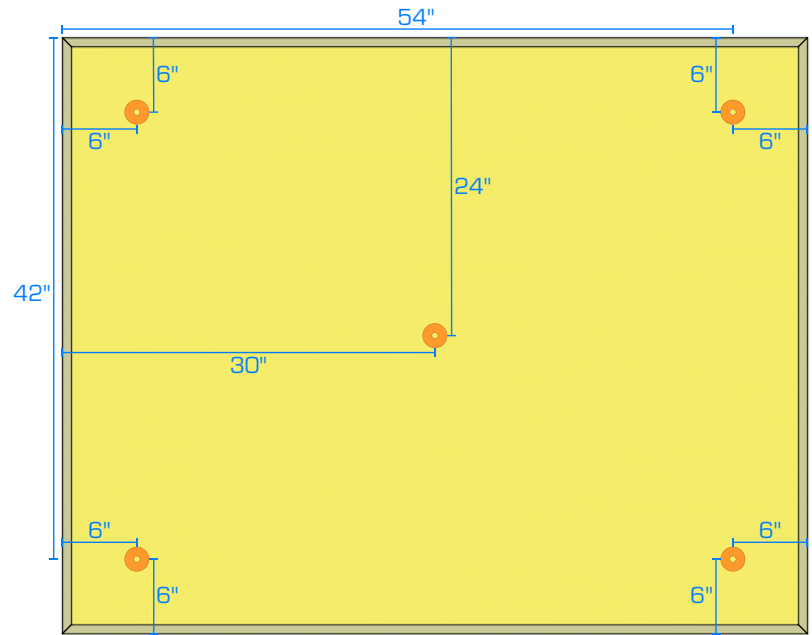


4' X 5' PANEL

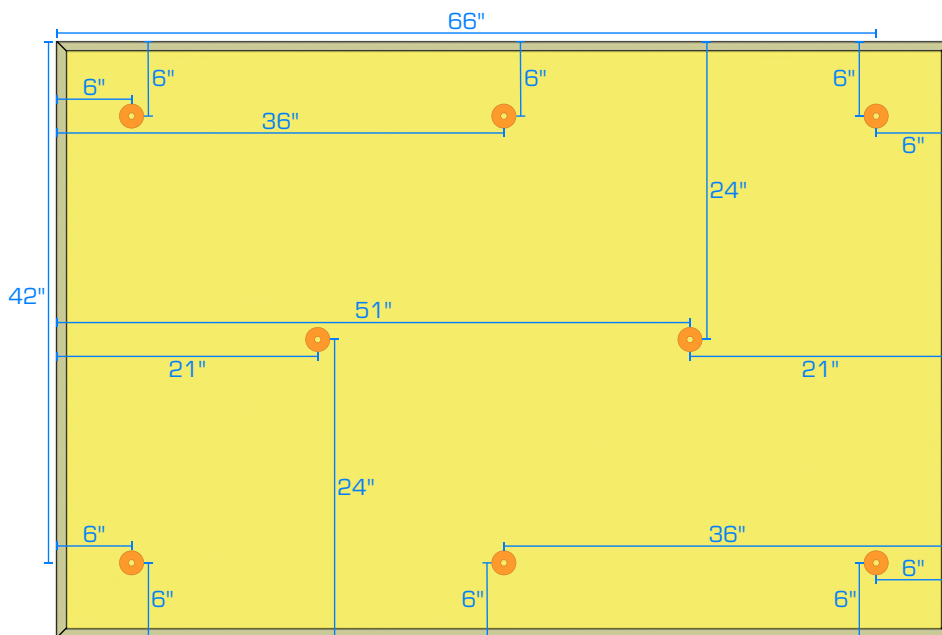


4' X 6' PANEL



FABRIC WRAPPED CLOUDS INSTALLATION GUIDE — FLUSH MOUNT ROTOFAST ANCHORS

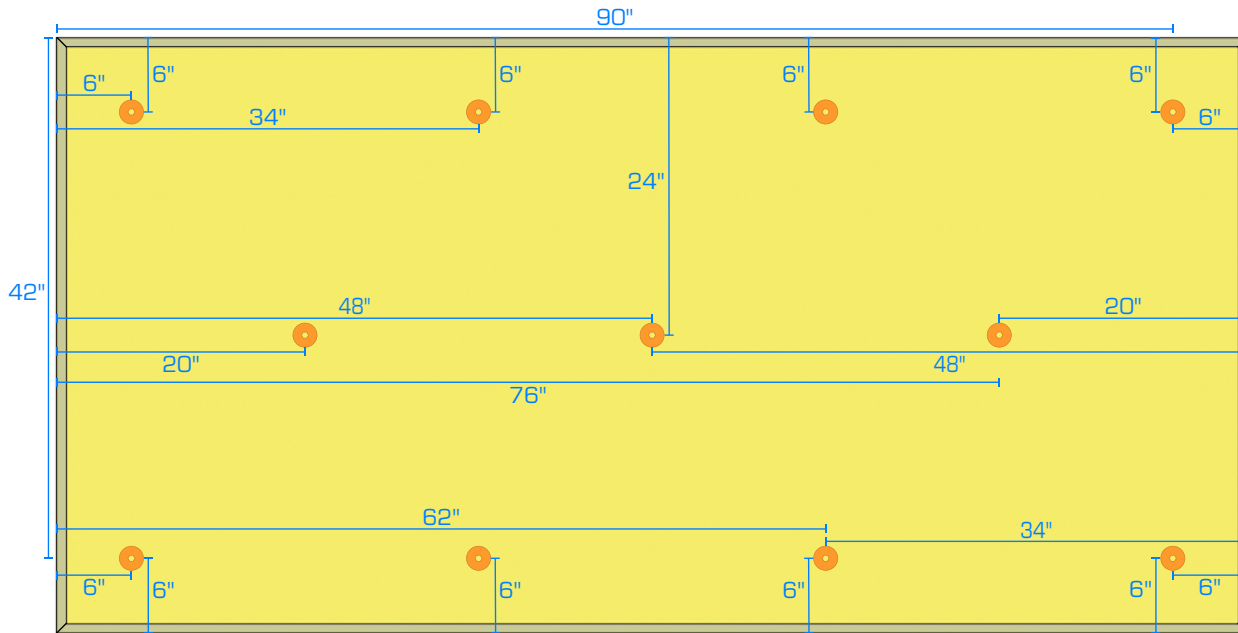

4' X 8' PANEL

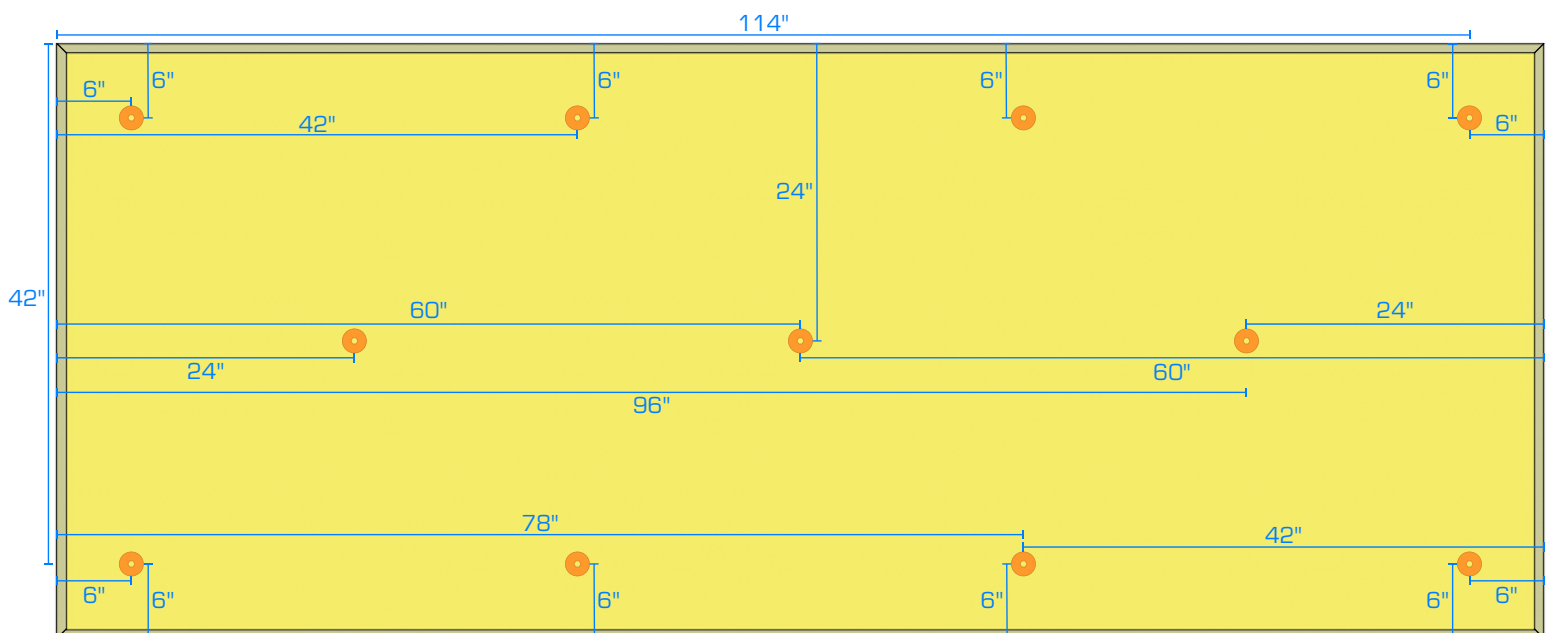

4' X 10' PANEL

