

ALPHASORB[®] FABRIC WRAPPED SOUND Baffle INSTALLATION GUIDE

The following information provides general notes and installation instructions for the AlphaSorb[®] Fabric Wrapped Sound Baffle using the included Acoustic Ceiling Cable Hanging System.

NOTE: If significant changes to structure are to be made, such as mounting cables into framing members, such installation impacts appropriately land in the purview of a structural engineer or general contractor licensed in the state where installation occurs.

MEASURE AND MARK

1. Determine the desired location for the acoustic baffle.
2. Use a measuring tape and pencil to mark the spots on the ceiling where the eye hooks will be installed. Ensure the marks are evenly spaced and aligned with the baffle's mounting points..
3. Mark the baffle as recommended in the diagram below and create a small hole.

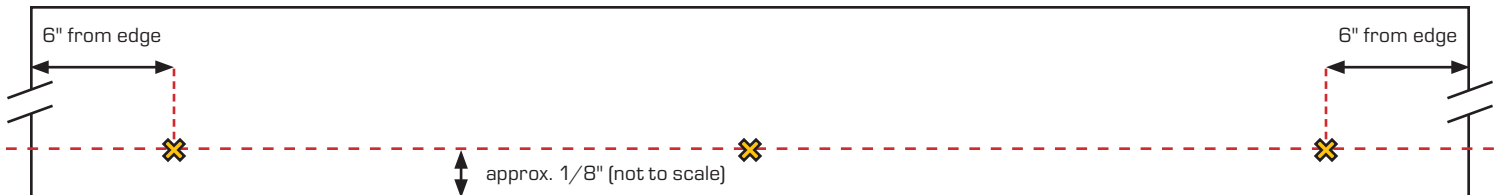


FIG 1A. 1" THICK PANEL

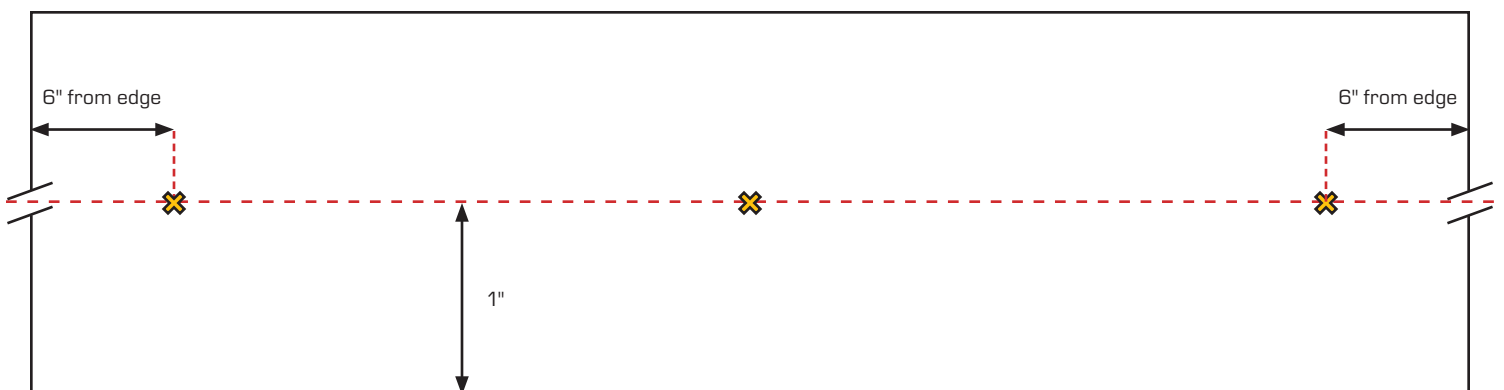


FIG 1B. 2" THICK PANEL



ALPHASORB[®] FABRIC WRAPPED SOUND BAFFLE INSTALLATION GUIDE

PREPARE THE BAFFLE

1 Locate the marked hole on the top of the baffle



2 Align the spring to the hole as shown



Holding the spring vertically, press down lightly and twist in a straight down motion.

3 Keep twisting down on the spring



Ensure that the spring does not pop out of the face of the baffle. Do not overtighten the spring.

4 Align the D-Ring to the panel




The spring should be firmly seated. All D-Rings should align in the same direction.



ALPHASORB[®] FABRIC WRAPPED SOUND Baffle INSTALLATION GUIDE

SUSPEND THE Baffle


1 Attach the eye-loop on the D hook; check for fit

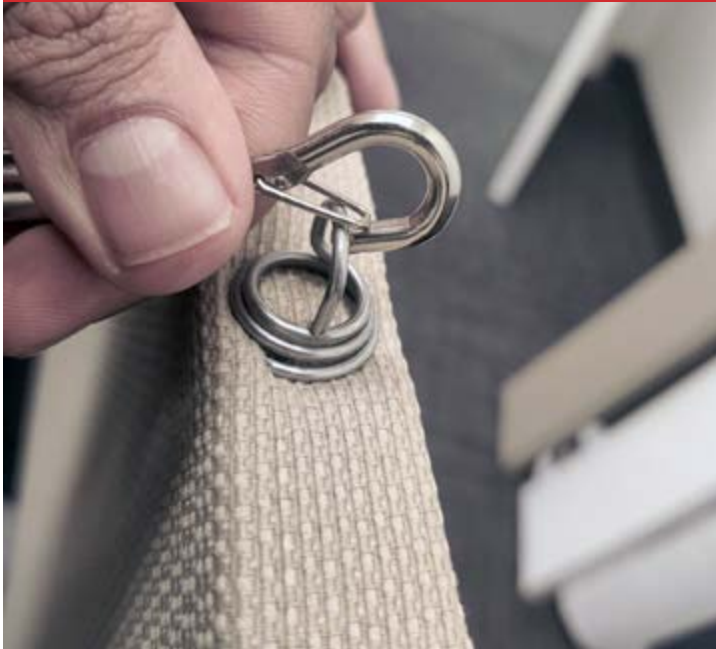

2 Push the wire so it exits the recess in the barrel



3 Adjust length as needed; repeat for all hooks

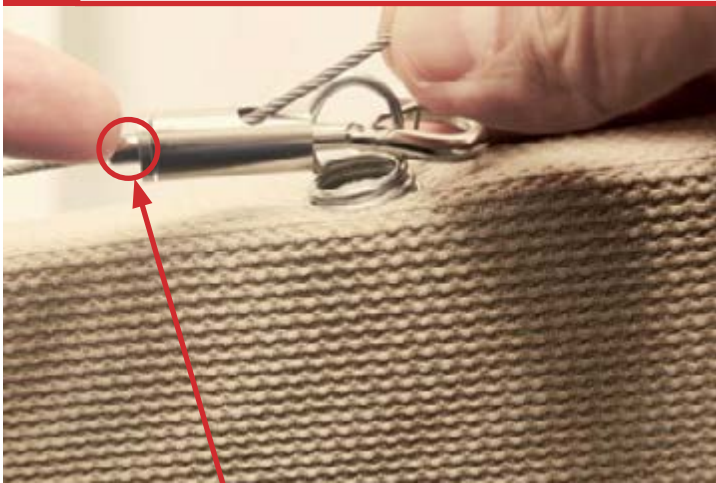

To retract the cable, press the adjustment knob toward the barrel and push the cable back.

4 Use a level to ensure perfect alignment

